

SAFETY/RISK/HAZARD ASSESSMENT

PLANT INFORMATION

NHG Ref/Part No. CF1/2/3/4

Plant ID:

Plant Name: Carpet Fan/Blower

Potential Noise Level in Db: 95 - 100 db

Required hearing protection class: 3

Operator Competency: Plant Licence Not Required
It is the hirer's responsibility to ensure that all operators are competent.

Please refer to the User Guide and Operators Manual for detailed Operating Instructions



Protective equipment must be worn when operating this machine



RISK ASSESSMENT INFORMATION

Potential Hazard(s)

Burn hazard

Risk Level Low

Control Measures Avoid contact with hot components. Allow engine to cool before attempting any maintenance.

Fire hazard

Risk Level Medium

Control Measures May cause fire when operating near flammable vapours or materials. Do not operate this machine near flammable fluids, dust or vapours.

KEY OPERATING INSTRUCTIONS

1. Use one fan per room (up to 36 sq m)
2. Carefully lift the carpet from the tackles strip and fold back approx.. 1m.
3. Do not stand the unit in water
4. Plug in to a standard outlet with the correct voltage and amperage for the unit
5. Place the fan in the corner with snout facing the centre of the room
6. Do not block air intake vents
7. Set the switch at the desired speed: low, medium or high (carpet should lift/float with a cushion of air below)
8. Check for proper operation before leaving the unit unattended
9. Run the fan until carpet, underlay and floor are completely dry. This could take up to 4 days.
10. Do not move or carry the dryer whilst it is running

Please refer to the User Guide and Operators Manual

for detailed Operating Instructions

The safety information contained in this assessment is general information only and should not be relied upon as a substitute for professional advice or tuition, which the hirer should seek before operating.