

SAFETY/RISK/HAZARD ASSESSMENT

PLANT INFORMATION

NHG Ref/Part No.

Plant ID:

BARRWF

Plant Name:

Water Filled Barrier

Operator Competency:

Plant Licence Not Required

It is the hirer's responsibility to ensure that all operators are competent.

Please refer to the User Guide and Operators Manual for detailed Operating Instructions



Protective
equipment
must be worn
when operating
this machine



RISK ASSESSMENT INFORMATION

This product is not permitted for use where vehicle speeds are in excess of 80km/h.

It is the hirer's responsibility to obtain the appropriate permissions and permits before installing this equipment.

It is the hirer's responsibility to ensure barriers are used and installed in accordance with the manufacturer's specifications.

Potential Hazard(s)

Crush Injury

Risk Level	Medium/High
Control Measures	Ensure water barriers are placed on flat, level, compacted ground prior to filling. Do not install or use on slopes. Empty before attempting to move or relocate. An empty barrier weighs approx. 40kg and requires 2 or more persons to manually lift.

**Please refer to the User Guide and Operators Manual
for detailed Operating Instructions**

The safety information contained in this assessment is general information only and should not be relied upon as a substitute for professional advice or tuition, which the hirer should seek before operating.