



NORTHERN HIRE GROUP PTY LTD

ABN: 64 604 387 671

P.O. Box 446 ECHUCA VIC 3564

P: 03 5482 6262 F: 03 5480 3293

sales@northerngeneratorhire.com.au

www.northernhiregroup.com.au

All Terrain Scissor

BASIC SET UP & USER GUIDE

Operation from the ground

1. Set the battery switch to 'ON'
2. Set the Emergency Stop Switch to 'ON'
3. Set the Ground Platform Selector Switch to 'Ground'
4. Press and hold the glow plug switch down for no longer than 20 seconds then release it just before starting
5. Press the Start Switch down and hold it until the engine starts, then release

To raise the platform from the ground

1. The engine must be running. If not, follow above procedures.
2. To **raise the platform**, press and hold the platform 'Lift/Lower' down whilst also holding the 'Enable' switch down
3. To **lower platform**, press and hold the platform 'Lift/Lower' switch down whilst also holding the 'Enable' switch down

Operating from the Platform Control

1. Set the Battery switch to 'ON'
2. Set the Emergency switch to 'ON'
3. Set the Ground/Platform switch to 'Platform'
4. Enter the platform and close the gate
5. Pull the Emergency switch till it 'pops' out
6. Press and hold the glow plug switch down for no longer than 20 seconds then release it just before starting
7. Press the Start Switch down and hold it until the engine starts, then release

Driving

1. Start engine as per above.
2. Set the speed switch to 'Turtle' if driving to other objects, over uneven ground, or where the platform needs to be moved at a slow speed
3. Set the Lift/Drive selector to 'Drive'
4. Squeeze and hold the Safety Control against the Joystick Controller
5. Push the Joystick Controller slowly forward or pull slowly back (depending on the direction you wish to go). Pushing the joystick further will increase speed.
6. Turning – Press and hold the Steering Rocker switch on top of the Joystick controller.

SAFETY HARNESS MUST BE WORN AT ALL TIMES