

SAFETY/RISK/HAZARD ASSESSMENT

PLANT INFORMATION

NHG Ref/Part No.

LoaKbu, LoaKbu1

Plant ID:

Plant Name:

Potential Noise Level in Db:

Required hearing protection class: 2

Operator Competency:

Plant Licence Not Required

It is the hirer's responsibility to ensure that all operators are competent.

Please refer to the User Guide and Operators Manual for detailed Operating Instructions



Protective
equipment
must be worn
when operating
this machine



RISK ASSESSMENT INFORMATION

Potential Hazard(s)

Crush injury

Risk Level Medium

Control Measures Keep unauthorised persons away from site

Establish a 4 meter exclusion zone around the local working area and ensure no person other than the operator, enters this zone whilst the machines engine is running.

Keep the general working area clear of bystanders and other workers. Loader operations typically rely on rapid movement and direction changes. It is important therefore to maintain vigilance about immediate surroundings.

Contact with or damage to, services

Risk Level Medium

Control Measures Dial before you Dig - Check with local authorities and land owners about the presence of underground services within the prospective working area prior to commencement of work.

Ensure excavations are located a minimum of 2 meters away from ANY underground service.

Avoid overhead cables. Where work site is within an overhead cable zone, ensure a spotter is used to avoid accidental contact.

**Please refer to the User Guide and Operators Manual
for detailed Operating Instructions**

The safety information contained in this assessment is general information only and should not be relied upon as a substitute for professional advice or tuition, which the hirer should seek before operating