

OPERATION SHEET

ROTARY TILLER

SAFETY/RISK/HAZARD ASSESSMENT

PLANT INFORMATION

NHG Ref/Part No. TILLER

Plant Name: Red Roo Rotary Tiller GT-622

Potential Noise Level in Db: 110db to less than 115db

Required hearing protection class: 5

Operator Competency: Plant Licence Not Required















RISK ASSESSMENT INFORMATION

Potential Hazard(s)

Injury from contact with moving parts

Risk Level High

Control Measures All users should familiarise themselves with the safe operation and emergency

shutdown procedures of the equipment.

Exclude non-essential persons from within 6m of the work area.

Ensure machine is positioned away from steep slopes that may alter the feed in

height, thus affecting the operation of the safety bar.

Ensure all loose clothing, body parts, hair and equipment such as ropes are kept

well clear of the operating machine.

Do not reach into tiller. Turn machine off, allow to come to a complete stop and

remove keys before attempting to dislodge jammed materials.

Hearing Damage

Risk Level Medium/High

Control Measures Hearing protection with a rating of SLC80db 26-360Db must be worn. Note

warning label on unit.

Explosion or fire from fuel vapours

Risk Level Medium

Control Measures Stop engine before refuelling. Do not refuel while hot. Avoid spillage of fuel when

refuelling. Ensure the fuel cap is properly secured after refuelling. Carry out visual checks for fuel leaks and repair before operation. Keep flammables away from the

engine. Do not smoke while operating, servicing or refuelling this machine.

Injury or ill health due to exposure to exhaust or fuel fumes

Risk Level Medium

Control Measures Do not operate in confined space. Use in well ventilated area, preferably with

fume extraction ventilation. Avoid breathing or coming into contact with fuel.

Exposure to ultraviolet radiation if working outdoors

Risk Level Medium

Control Measures Wear sunscreen, hat, long sleeves and long pants.

Burn hazard

Risk Level Medium/Low

Control Measures Wear protective clothing during operation. Avoid contact with hot components.

Never operate the engine with heat shields removed.

Manual handling hazard

Risk Level Medium

Control Measures Take care when transporting.

Two people are required to lift and transport the machine.

KEY OPERATING INSTRUCTIONS

Please refer to the User Guide and Operators Manual for detailed Operating Instructions

The safety information contained in this assessment is general information only and should not be relied upon as a substitute for professional advice or tuition, which the hirer should seek before operating.