



NORTHERN HIRE GROUP

5kVA Generator Operating Procedure

Please refer to Pre-Start Procedure prior to operating this equipment

Use **UNLEADED** fuel only.

1. **To start unit:**

- a) Turn the fuel lever to the ON position
- b) Ensure engine stop switch is in the ON position
For cold starting use the choke lever
- c) Move throttle to low speed position
- d) Gently pull the starter grip until you feel resistance. Allow to gently recoil. Start the engine by swiftly pulling the recoil rope. Allow rope to gently recoil. Repeat if necessary.
- e) As the engine warms up, return the choke lever to the open position.

2. **To commence operation**, open the throttle to the full factory set speed . The unit is factory set to provide correct power supply. **Do not reduce** the throttle or adjust the speed setting as this will reduce the output required to power the appliance.

NOTES:

- **Do not overload** the unit by attempting to power an appliance beyond the output capabilities of the generator
- **Use only** heavy duty 15Amp extension leads
- **Test the operation of the safety switch** before connecting any appliance
If the safety switch trips off, disconnect the faulty appliance and have it checked

3. **To stop unit:**

- a) Return the throttle to low speed, turn the stop switch to OFF
- b) Turn fuel lever to OFF position

IMPORTANT INFORMATION

When welding, the frame of the unit must not be in contact with the material being welded, or damage to the wiring will result.

Please report all faults, signs of wear/damage, leaks, or any other maintenance issue immediately to
Northern Hire Group Pty Ltd personnel.

Do not consent to, or attempt any repair without authorisation from Northern Hire Group Pty Ltd.