

MACHINE OPERATION

.1 EVERYDAY CHECK-UP

Daily Inspection

Before starting the engine, walk around the machine to check for any loose nuts and bolts, any oil, fuel or coolant leakage, and the condition of attachment and hydraulic system.

Check for any looseness in the electrical wiring and for any accumulated material (leaves, dirt, etc.). Repair and clean as necessary.

WARNING

The deposit of combustible, fuel leakage and oil leakage in heated area around the engine, muffler and battery may cause fire of machine. Check the area sufficiently, and if the abnormality is found, repair it or contact our dealer/distributor.

Check the engine for any oil, fuel or coolant leakage. Repair as required.

Check the area around the engine and radiator for any accumulated material and remove as required.

Check the hydraulic equipment, hydraulic oil tank, hoses, and joints for oil leakage, and repair as required.

Check the travel system, such as the crawler, idlers, and sprockets, for any damage or wear, and the bolts for looseness.

Check the attachments, cylinders, linkages and hoses for any cracks, wear or looseness and repair as required.

Check the door, cover, steps and handrails for damage, and the bolts for looseness. Repair and tighten bolts as required.

Verify that the gauges and the monitor panel (gauge cluster) function properly.

Check rear view mirror for abnormality, and if abnormality is found, repair it.

Clean the surface of mirror and adjust the angle so that the rear sight is visible from the operator seat.

Check seat belt and attaching metal for possible damage and if damaged, replace it with new one.