

### Safety - General instructions

(Also read the safety manual)



1. **Read and understand this manual before starting and operate the machine. The operator must be familiar with the contents of the OPERATION section before starting the roller.**
2. **Ensure that all instructions in the MAINTENANCE section are followed.**
3. **Do not operate the machine if you are not qualified, by training or experience. Only the operator is allowed to be on the roller. Remain seated at all times when operating the roller.**
4. **Never use the roller if it is in need of adjustment or repair.**
5. **Only ascend and descend the roller when it is stationary. Use the intended footsteps, grips and rails. Always use the three-point grip (both feet and one hand, or one foot and both hands) when ascending or descending the machine. Never jump down from the machine.**
6. **If the terrain stability conditions are irregular or dangerous, use the Roll Over Protection Structure (ROPS). Always use the seat belt with "ROPS".**
7. **Drive slowly in sharp bends.**
8. **Avoid driving across slopes. Drive straight up or straight down the slope. Operate the machine in first gear and always check the operation of the brakes.**
9. **When operating the machine near the beginning of slopes or holes, make sure that at least 2/3 of the machine width is under compacted material.**
10. **Make sure that there are no obstacles in the direction of travel, on the ground, in front of or behind the roller, or overhead.**
11. **Drive particularly carefully on uneven ground.**
12. **Use the available safety equipment. On machines equipped with ROPS, you must use the safety belt.**
13. **Keep the roller clean. Clean any dirt or grease that accumulates on the operator platform immediately. Keep all signs and decals clean and legible.**
14. **Safety measures before refueling:**
  - **Stop the engine;**
  - **Do not smoke;**
  - **No naked flames in the vicinity of the roller;**
  - **Earth the filling equipment nozzle to the tank opening to avoid sparks.**

15. **Before repairs or service:**
  - **-Chock the drums/wheels;**
  - **-Lock the articulation if necessary.**
  
16. **Hearing protection is recommended if the noise level exceeds 85 dB(A). The noise level can vary depending on the equipment on the machine and the surface the machine is being used on.**
  
17. **Do not make any changes or modifications to the roller that could affect safety. Changes are only to be made after written approval has been given by Dynapac**
  
18. **Avoid using the roller before the hydraulic fluid has reached its normal working temperature. Braking distances can be longer than normal when the fluid is cold. See instructions in the STOP section.**
  
19. **For your own protection always wear:**
  - **Helmet;**
  - **Working boots with steel toecaps;**
  - **Ear protectors;**
  - **Reflecting clothing / high visibility jacket;**
  - **Working gloves**