

# Operation & Safety Manual

Original Instructions - Keep this manual with the machine at all times.

ES1932, ES1932i

**PVC 2304** 

31221541

December 2, 2024 - Rev C



### **A WARNING**

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to www.P65Warnings.ca.gov.

#### **FOREWORD**

The Mobile Elevating Work Platform (MEWP) models covered in this manual are designed and tested to meet or exceed various compliance standards. Please refer to the manufacturer's nameplate affixed to the subject MEWP for specific standard compliance information.

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

Refer to www. JLG. com for Warranty, Product Registration, and other machine-related documentation

This manual is originally written in English.

#### SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

### **A DANGER**

Indicates an imminently hazardous situation. If not avoided, will result in serious injury or death. This decal will have a red background.

### **A WARNING**

Indicates a potentially hazardous situation. If not avoided, could result in serious injury or death. This decal will have an orange background.

### **A** CAUTION

Indicates a potentially hazardous situation. If not avoided, may result in minor or moderate injury. It may also alert against unsafe practices. This decal will have a yellow background.

### NOTICE

Indicates information or a company policy that relates directly or indirectly to the safety of personnel or protection of property.

### **A** WARNING

This product must comply with all safety related bulletins. Contact JLG Industries, Inc. or the local authorized JLG representative for information regarding safety related bulletins which may have been issued for this product.

### NOTICE

JLG Industries, Inc. sends safety related bulletins to the owner of record of this machine. Contact JLG Industries, Inc. to ensure that the current owner records are updated and accurate.

### NOTICE

JLG Industries, Inc. must be notified immediately in all instances where JLG products have been involved in an accident involving bodily injury or death or when substantial damage has occurred to personal property or the JLG product.

#### Foreword

#### For:

- Accident Reporting
- · Product Safety Publications
- Current Owner Updates
- · Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- · Questions Regarding Product Modifications

#### Contact:

Product Safety and Reliability Department

JLG Industries, Inc.

13224 Fountainhead Plaza

Hagerstown, MD 21742

USA

or Visit www.jlg.com to find your local JLG office.

In USA:

Toll Free: 877-JLG-SAFE (877-554-7233)

**Outside USA:** 

Phone: 240-420-2661

Fax: 301-745-3713

E-mail: ProductSafety@JLG.com

#### **REVISION LOG**

Date	Revision	Description
April 10, 2023	Α	Original Issue
October 9, 2023	В	Revision
December 2, 2024	С	Revision

#### **Other Publications Available**

Publication	Publication Number
Service & Maintenance Manual	31221542
Illustrated Parts Manual	31221543

This Page is intentionally left blank

### **SECTION CONTENTS**

Section	Subject	Page
FOREWO	PRD	3
REVISION	N LOG	7
SECTION	1 PRECAUTIONS	13
1.1	General	
1.1	Pre-Operation	
1.3	Operation	
1.4	Towing, Lifting, and Hauling	
1.5	Maintenance	
1.6	Long-Term Storage	24
	2 SPONSIBILITIES, MACHINE PREPARA ION	
2.1	Personnel Training	25
2.2	Preparation, Inspection, and Maintenance	26
2.3	Pre-Start Inspection	
2.4	Walk-Around Inspection	
2.5	Function Check	31
	CONTROLS, INDICATORS, AND	
	ON	
3.1	General	
3.2	Description	
3.3	Operating Characteristics and Limitations	
3.4 3.5	Platform Loading	
3.6	Battery Charging	
3.7	Ground Control Station	
3.8	Platform Control Station	
3.9	Platform Manual Descent	46

3.10	Grade And Side Slope	47
3.11	Platform Extension	47
3.12	Parking and Stowing Machine	48
3.13	Platform Rails Fold-Down Procedure (If Equipped)	50
3.14	Machine Lifting And Tie Down	54
3.15	Towing	57
3.16	Beacons	58
3.17	ClearSky Smart Fleet™	59
3.18	Access Control - ClearSky Smart Fleet™ (If Equipped) .	59
3.19	Safety Decal Locations	60
SECTIO	N 4	
<b>EMERGI</b>	ENCY PROCEDURES	65
4.1	General	65
4.2	Incident Notification	65
4.3	Emergency Operation	65
4.4	Platform Manual Descent	66
4.5	ClearSky Smart Fleet™ - Locked Out State	67
SECTIO	N 5	
	SORIES	69
5.1	Available Accessories	69
5.2	Anti-Vandalism Package	71
5.3	DC/AC Power Inverter	
5.4	Electrician's Tree	74
5.5	Footswitch	76
5.6	Heavy Duty Tool Tray	76
5.7	Magnetic Gate Latch	77
5.8	Panel Carrier	77
5.9	Pipe Racks	79
5.10	Platform Extension Handles	82
5.11	Platform Worklights	83
5.12	SkySense®	83
5.13	Workstation	87
SECTIO	N 6	
	E SPECIFICATIONS AND OPERATOR	<b>.</b> .
	NANCE	
6.1	General	
6.2	Serial Number Identification	89

6.3	Machine Specifications	89
6.4	Lubrication	94
6.5	Hydraulic Oil Check Procedure	96
6.6	Scissor Arm — Safety Prop	96
6.7	Battery Maintenance and Charging	98
6.8	Battery Quick-Disconnect	100
6.9	Tires and Wheels	101
6.10	Diagnostic Trouble Codes (DTC)	103
6.11	Radio Frequency (RF) Information	114
6.12	Supplemental Information Only Applicable to CE/UKCA Machines (EN280-1:2022)	116
6.13	EC Declaration of Conformity	117
6.14	UKCA Declaration of Conformity	118
6.15	Supplemental Information Only Applicable to CE/UKCA Machines (EN280:2013+ A1:2015)	119
6.16	EC Declaration of Conformity	120
6.17	UKCA Declaration of Conformity	

This Page is intentionally left blank

## SECTION 1 Safety Precautions

#### 1.1 GENERAL

This section outlines the necessary precautions for proper and safe machine usage and maintenance. It is mandatory that a daily routine is established based on the content of this manual to promote proper machine usage. A maintenance program, using the information provided in this manual and the Service & Maintenance Manual, must also be established by a qualified person and must be followed to ensure that the machine is safe to operate.

The owner/user/operator/lessor/lessee of the machine must not accept operating responsibility until this manual has been read, training is accomplished, and operation of the machine has been completed under the supervision of an experienced and qualified operator.

This section contains the responsibilities of the owner, user, operator, lessor, and lessee concerning safety, training, inspection, maintenance, application, and operation. If there are any questions with regard to safety, training, inspection, maintenance, application, and operation, please contact JLG Industries, Inc. ("JLG").


### **A WARNING**

Failure to comply with the safety precautions listed in this manual could result in machine damage, property damage, personal injury or death.

#### 1.2 PRE-OPERATION

#### 1.2.1 Operator Training and Knowledge

Read, understand, and study the Operation & Safety Manual in its entirety before
operating the machine. For clarification, questions, or additional information
regarding any portions of this manual, contact JLG Industries, Inc.



 Only personnel who have received proper training regarding the inspection, application and operation of MEWPs (including recognizing and avoiding hazards associated with their operation) shall be authorized to operate a MEWP.

- Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation.
- Read, understand, and obey all DANGERS, WARNINGS, CAUTIONS, and operating instructions on the machine and in this manual.
- Ensure that the machine is to be used in a manner which is within the scope of its intended application as determined by JLG.
- All operating personnel must have a thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground and emergency descent controls.
- Read, understand, and obey all applicable employer, local, and governmental regulations as they pertain to your utilization and application of the machine.

#### 1.2.2 Workplace Inspection

- Precautions to avoid all hazards in the work area must be taken by the user before and during operation of the machine.
- Do not operate or raise the platform from a position on trucks, trailers, railway cars, floating vessels, scaffolds or other equipment unless the application is approved in writing by JLG.
- Before operation, check work area for overhead hazards such as electric lines, bridge cranes, and other potential overhead obstructions.
- Check operating surfaces for holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards.
- Check the work area for hazardous locations. Do not operate the machine in hazardous environments unless approved for that purpose by JLG.
- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel. Do not travel on unsupported surfaces.
- This machine can be operated in nominal ambient temperatures of 0°F to 104°F (-20°C to 40°C). Consult JLG to optimize operation outside of this temperature range.
- When operating an internal combustion engine at high altitudes, a decrease in
  machine performance may occur due to a decrease in air density depending on
  engine aspiration type, temperature, and humidity, therefore JLG recommends
  not operating the machine higher than 6000 m above sea level without
  consultation with the engine suppliers. For electric machines, performance may
  diminish higher than 6000 m above sea level.

#### 1.2.3 Machine Inspection

• Do not operate this machine until the inspections and functional checks as specified in the User Responsibilities, Machine Preparation, and Inspection section of this manual have been performed.

- Do not operate this machine until it has been serviced and maintained according to the maintenance and inspection requirements as specified in the machine's Service & Maintenance Manual.
- Ensure all safety devices are operating properly. Modification of these devices is a safety violation.

### **A WARNING**

Modification or major alteration of a MEWP shall be made only with the prior written permission from the manufacturer. Modification is defined as change(s) to a MEWP that affect the operation, stability, safety factors, rated load, or safety of the MEWP in any way.

- Do not operate any machine on which the safety or instruction placards or decals are missing or illegible.
- Check the machine for modifications to original components. Ensure that any
  modifications have been approved by JLG.
- Avoid accumulation of debris on platform floor. Keep mud, oil, grease, and other slippery substances from footwear and platform floor.

#### 1.3 OPERATION

#### 1.3.1 General

- Machine operation requires your full attention. Bring the machine to a full stop before using any device, i.e. cell phones, two-way radios, etc. that will distract your attention from safely operating the machine.
- Do not use the machine for any purpose other than positioning personnel, their tools, and equipment.
- Before operation, the user must be familiar with the machine capabilities and operating characteristics of all functions.
- Never operate a malfunctioning machine. If a malfunction occurs, shut down the machine. Remove the unit from service and notify the proper authorities.
- · Do not remove, modify, or disable any safety devices.
- Never slam a control switch or lever through neutral to an opposite direction. Always return switch to neutral and stop before moving the switch to the next function. Operate controls with slow and even pressure.
- Do not allow personnel to tamper with or operate the machine from the ground with personnel in the platform, except in an emergency.
- Do not carry materials directly on platform railing unless approved by JLG.
- When two or more persons are in the platform, the operator shall be responsible for all machine operations.

#### Safety Precautions


- Always ensure that power tools are properly stowed and never left hanging by their cord from the platform work area.
- Do not assist a stuck or disabled machine by pushing or pulling except by pulling at the chassis tie-down lugs.
- Fully lower platform and shut off all power before leaving machine.
- Remove all rings, watches, and jewelry when operating machine. Do not wear loose fitting clothing or long hair unrestrained which may become caught or entangled in equipment.
- Persons under the influence of drugs or alcohol or who are subject to seizures, dizziness or loss of physical control must not operate this machine.
- Hydraulic cylinders are subject to thermal expansion and contraction. This may result in changes to the platform position while the machine is stationary. Factors affecting thermal movement can include the length of time the machine will remain stationary, hydraulic oil temperature, ambient air temperature, and platform position.

#### 1.3.2 Trip and Fall Hazards

 Prior to operation, ensure all gates and rails are fastened and secured in their proper position.




- JLG Industries, Inc. recommends that all persons in the platform wear a full body harness with a lanyard attached to an authorized lanyard anchorage point while operating this machine. For further information regarding fall protection requirements on JLG products, contact JLG Industries, Inc.
- Identify the designated lanyard anchorage point(s) at the platform and securely attach the lanyard. Attach only one (1) lanyard per lanyard anchorage point.
- Enter and exit only through gate area. Use extreme caution when entering or leaving platform. Ensure that the platform assembly is fully lowered. Face the machine when entering or leaving the platform. Always maintain "three point contact" with the machine, using two hands and one foot or two feet and one hand at all times during entry and exit.

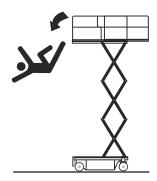

- Keep both feet firmly positioned on the platform floor at all times. Never position ladders, boxes, steps, planks, or similar items on unit to provide additional reach for any purpose.
- Never use the scissor arm assembly to gain access to or leave the platform.
- Keep oil, mud, and slippery substances cleaned from footwear and the platform floor.

#### 1.3.3 Electrocution Hazards

- This machine is not insulated and does not provide protection from contact with or proximity to electrical current.
- It is not recommended to use the machine during lightning. To prevent injury or machine damage if lightning occurs during operation, lower the platform and shut down the machine in a safe and secure location.

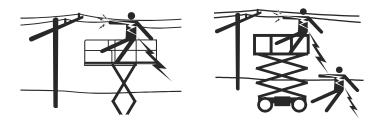

- Maintain distance from electrical lines, apparatus, or any energized (exposed or insulated) parts according to the Minimum Approach Distance (MAD) as shown in Table — Minimum Approach Distances (MAD), page 17.
- · Allow for machine movement and electrical line swaying.

Table 1. Minimum Approach Distances (MAD)

Voltage Range (Phase to Phase)	Minimum Approach Distance in Feet (Meters)
0 to 50 KV	10 (3)
Over 50K V to 200 KV	15 (5)

Table 1. Minimum Approach Distances (MAD) (continued)

Voltage Range (Phase to Phase)	Minimum Approach Distance in Feet (Meters)
Over 200 KV to 350 KV	20 (6)
Over 350 KV to 500 KV	25 (8)
Over 500 KV to 750 KV	35 (11)
Over 750 KV to 1000 KV	45 (14)

**Note:** This requirement shall apply except where employer, local or governmental regulations are more stringent.


- Maintain a clearance of at least 10 ft (3 m) between any part of the machine and its occupants, their tools, and their equipment from any electrical line or apparatus carrying up to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less.
- The MAD may be reduced if insulating barriers are installed to prevent contact, and the barriers are rated for the voltage of the line being guarded. These barriers shall not be part of (or attached to) the machine.
- The MAD shall be reduced to a distance within the designed working dimensions
  of the insulating barrier. This determination shall be made by a qualified person
  with respect to electrical transmission and distribution in accordance with the
  employer, local, or governmental requirements for work practices near energized
  equipment.

### A DANGER

Do not maneuver machine or personnel inside prohibited zone (MAD). Assume all electrical parts and wiring are energized unless known otherwise.

#### 1.3.4 Tipping Hazards

- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel.
   Do not travel on unsupported surfaces.
- The user must be familiar with the operating surface before driving. Do not exceed the allowable side slope and grade while driving.

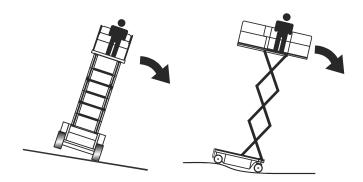

- Do not elevate platform or drive with platform elevated while on or near a sloping, uneven, or soft surface.
- Ensure machine is positioned on a smooth, firm surface within the limits of the maximum operating slope before elevating platform or driving with the platform in the elevated position.
- Before driving on floors, bridges, trucks, and other surfaces, check allowable capacity of the surfaces.
- Never exceed the maximum platform capacity as specified on the platform. Keep all loads within the confines of the platform, unless authorized by JLG.
- Keep the chassis of the machine a minimum of 2 ft (0.6 m) from holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards at the ground level.
- Do not push or pull any object with the machine.
- Never attempt to use the machine as a crane. Do not tie-off machine to any adjacent structure. Never attach wire, cable, or any similar items to platform.
- If the scissor arm assembly or platform is caught so that one or more wheels are
  off the ground, all persons must be removed before attempting to free the
  machine. Use cranes, forklift trucks, or other appropriate equipment to stabilize
  machine.
- Do not operate the machine when wind conditions, including gusts, exceed specifications shown in the Machine Specifications and Operator Maintenance section. Refer to *Table — Beaufort Scale (For Reference Only)*, page 21. Factors affecting wind speed are; platform elevation, surrounding structures, local weather events, and approaching storms.
- Wind speed can be significantly greater at height than at ground level.
- Wind speed can change rapidly. Always consider approaching weather events, the time required to lower the platform, and methods to monitor current and potential wind conditions.

#### **Safety Precautions**

- Do not cover or increase surface area of the platform or the load. Do not carry large surface area items in the platform when operating outdoors. The addition of such items increases the exposed wind area of the machine. Increased areas exposed to wind will decrease stability.
- Do not increase the platform size with unauthorized modifications, deck extensions, or attachments.

### **A** WARNING

Do not operate the machine when wind conditions exceed specifications shown in the General Specifications section of this manual or as shown on the capacity placard on the platform billboard.

Twigs broken from trees. Cars veer on

Light structure damage.

			=		
Beau- Wind Speed		Description	Land Conditions		
Number	mph	m/s	Description	Land Conditions	
0	0	0-0.2	Calm	Calm. Smoke rises vertically	
1	1-3	0.3-1.5	Light air	Wind motion visible in smoke	
2	4-7	1.6-3.3	Light breeze	Wind felt on exposed skin. Leaves rustle	
3	8-12	3.4-5.4	Gentle breeze	Leaves and smaller twigs in constant motion	
4	13-18	5.5-7.9	Moderate breeze	Dust and loose paper raised. Small branches begin to move.	
5	19-24	8.0-10.7	Fresh breeze	Smaller trees sway.	
6	25-31	10.8-13.8	Strong breeze	Large branches in motion. Flags waving near horizontal. Umbrella use becomes difficult.	
7	32-38	13.9-17.1	Near Gale/ Moderate Gale	Whole trees in motion. Effort needed to walk against the wind.	
1	1	1	1	1	

Table 2. Beaufort Scale (For Reference Only)

#### 1.3.5 Crushing and Collision Hazards

8

9

39-46

47-54

17.2-20.7

20.8-24.4

Approved head gear must be worn by all operating and ground personnel.

Fresh Gale

Strong Gale

road.

• Watch for obstructions around machine and overhead when driving. Check clearances above, on sides, and bottom of platform during all operations.



- During operation, keep all body parts inside platform railing.
- Keep hands and limbs out of the scissor arm assembly during operation and when elevated without safety prop engaged.

#### Safety Precautions

- Always post a lookout when driving in areas where vision is obstructed.
- Keep non-operating personnel at least 6 ft (1.8 m) away from machine during all operations.
- Under all travel conditions, the operator must limit travel speed according to conditions of ground surface, congestion, visibility, slope, location of personnel, and other factors.
- Be aware of stopping distances in all drive speeds. When driving in high speed, reduce drive speed before stopping. Travel grades in low speed only.
- Do not use high speed drive in restricted or close quarters or when driving in reverse.
- Exercise extreme caution at all times to prevent obstacles from striking or interfering with operating controls and persons in the platform.
- Ensure that operators of other overhead and floor level machines are aware of the MEWP's presence. Disconnect power to overhead cranes. Barricade floor area if necessary.
- Do not operate over ground personnel. Warn personnel not to work, stand, or walk under a raised boom or platform. Position barricades on floor if necessary.

### **A** WARNING

If driving machine with the platform control station from ground, do not hang the control box on any part of the machine while driving. Hold the control box and keep at least 3 ft (1 m) distance from machine.

#### 1.4 TOWING, LIFTING, AND HAULING

- Never allow personnel in platform while towing, lifting, or hauling.
- This machine should not be towed, except in the event of emergency, malfunction, power failure, or loading/unloading. Refer to the Emergency Procedures section of this manual for emergency towing procedures.
- Ensure platform is fully retracted and completely empty of tools prior to towing, lifting or hauling.
- When lifting machine with a forklift, position forks only at designated areas of the machine. Lift with a forklift of adequate capacity.
- Refer to the Machine Operation section of this manual for lifting information.

#### 1.5 MAINTENANCE

This sub-section contains general safety precautions which must be observed during maintenance of this machine. Additional precautions to be observed during machine maintenance are inserted at the appropriate points in this manual and in the Service and Maintenance Manual. It is of utmost importance that maintenance personnel pay strict attention to these precautions to avoid possible injury to personnel or damage to the machine or property. A maintenance program must be established by a qualified person and must be followed to ensure that the machine is safe.

#### 1.5.1 Maintenance Hazards

- Shut off power to all controls and remove the key to ensure that all moving parts are secured from inadvertent motion prior to performing any adjustments or repairs.
- Never work under an elevated platform until it has been fully lowered to the full down position, if possible, or otherwise supported and restrained from movement with appropriate safety props, blocking, or overhead supports.
- DO NOT attempt to repair or tighten any hydraulic hoses or fittings while the machine is powered on or when the hydraulic system is under pressure.
- Always relieve hydraulic pressure from all hydraulic circuits before loosening or removing hydraulic components.
- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.



- Use only replacement parts or components that are approved by JLG. To be considered approved, replacement parts or components must be identical or equivalent to original parts or components.
- Never attempt to move heavy parts without the aid of a mechanical device. Do
  not allow heavy objects to rest in an unstable position. Ensure adequate support
  is provided when raising components of the machine.
- Use only approved non-flammable cleaning solvents.
- Do not replace items critical to stability, such as batteries or solid tires, with items
  of different weight or specification. Do not modify the MEWP in any way to affect
  stability.
- Refer to the Service & Maintenance Manual for the weights of critical stability items.

### **A WARNING**

Modification or major alteration of a MEWP shall be made only with the prior written permission from the manufacturer. Modification is defined as change(s) to a MEWP that affect the operation, stability, safety factors, rated load, or safety of the MEWP in any way.

#### 1.5.2 Battery Hazards

- Always disconnect batteries when servicing electrical components or when performing welding on the machine.
- Do not allow smoking, open flame, or sparks near battery during charging or servicing.
- Do not contact tools or other metal objects across the battery terminals.
- Always wear hand, eye, and face protection when servicing batteries. Ensure that battery acid does not come in contact with skin or clothing.

### **A** CAUTION

Battery fluid is highly corrosive. Avoid contact with skin and clothing at all times. Immediately rinse any contacted area with clean water and seek medical attention.

- Charge batteries only in a well ventilated area.
- Avoid overfilling the battery fluid level. Add distilled water to batteries only after the batteries are fully charged.

#### 1.6 LONG-TERM STORAGE

- Prior to long-term storage of machines (placed into storage for periods greater than 3 months) with an internal combustion engine, refer to the engine manufacturer's guidance regarding fuel degradation.
- For long-term storage of battery-electric machines, store machines in a cool, dry
  place away from direct sunlight and heat sources. Avoid storing batteries in a fully
  discharged or fully charged state.

#### **SECTION 2**

## User Responsibilities, Machine Preparation, and Inspection

#### 2.1 PERSONNEL TRAINING

The Mobile Elevating Work Platform (MEWP) is a personnel handling device, so it is necessary that it be operated and maintained only by trained personnel.

#### 2.1.1 Operator Training

Operator training must cover:

- 1. Reading and understanding the Operation and Safety Manual.
- 2. Thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground, and emergency descent controls.
- 3. Control labels, instructions, and warnings on the machine.
- 4. Applicable regulations, standards, and safety rules.
- 5. Use of approved fall protection equipment.
- Enough knowledge of the mechanical operation of the machine to recognize a malfunction or potential malfunction.
- 7. The safest means to operate the machine where overhead obstructions, other moving equipment, and obstacles, depressions, holes, and drop-offs exist.
- 8. Means to avoid the hazards of unprotected electrical conductors.
- Selection of the appropriate MEWP and available options for the work to be performed considering specific job requirements, with involvement from the MEWP owner, user, and/ or supervisor.
- 10. The responsibility of the operator to ensure all platform occupants have a basic level of knowledge to work safely on the MEWP, and to inform them of applicable regulations, standards, and safety rules.
- 11. The requirement for familiarization in addition to training.

#### 2.1.2 Training Supervision

Training must be delivered by a qualified person in an open area free of hazards until the trainee has demonstrated the ability to safely control and operate the machine.

#### 2.1.3 Operator Responsibility

The operator must be instructed that they have the responsibility and authority to shut down the machine in case of a malfunction or other unsafe condition of either the machine or the job site.

#### 2.1.4 Machine Familiarization

**Note:** Responsibilities for familiarization may vary by region.

Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation. The user shall ensure that after familiarization, the operator operates the MEWP for a sufficient period of time to achieve proficiency. When authorized by the user, self-familiarization can be achieved, if authorized, by a properly trained operator reading, understanding and following the manufacturer's operator's manual.

Prior to user's authorization of an operator to use a specific model of MEWP, the user shall ensure the operator is familiarized on the following:

- Location of the manual storage compartment and the requirement to ensure the required manual(s) are present on the MEWP;
- 2. Purpose and function of the machine controls and indicators at the platform and ground control stations;
- 3. Purpose, location, and function of the emergency controls;
- 4. Operating characteristics and limitations;
- Features and devices:
- 6. Accessories and optional equipment.

#### 2.2 PREPARATION, INSPECTION, AND MAINTENANCE

The following table covers machine inspections and maintenance required by JLG Industries, Inc. Consult local regulations for further requirements for MEWPs. The frequency of inspections and maintenance must be increased as necessary when the machine is used in a harsh or hostile environment, if the machine is used with increased frequency, or if the machine is used in a severe manner.

Table 3. Inspection and Maintenance Table

Туре	Frequency	Primary Responsibility	Service Qualification	Reference
Pre-Start Inspection	Before using each day; or whenever there is an Operator change	User or Operator	User or Operator	Operation & Safety Manual
Pre-Delivery In- spection (See Note)	Before each sale, lease, or rental delivery	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Main- tenance Manual and applicable JLG inspection form
Frequent Inspection (See Note)	In service for 3 months or 150 hours, whichever comes first or Out of service for a period of more than 3 months or Purchased used	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Main- tenance Manual and applicable JLG inspection form
Annual Machine Inspection (See Note)	Annually, no later than 13 months from the date of prior inspection	Owner, Dealer, or User	Factory Trained Service Techni- cian (Recom- mended)	Service & Maintenance Manual and applicable JLG inspection form
Preventive Maintenance	At intervals as specified in the Service & Main- tenance Manual	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Main- tenance Manual

**Note:** Inspection forms are available from JLG. Use the Service & Maintenance Manual to perform inspections.

### NOTICE

JLG Industries, Inc. recognizes a factory trained service technician as a person who has successfully completed the JLG Service Training School for the specified JLG product model.

#### 2.3 PRE-START INSPECTION

The Pre-Start Inspection should include each of the following:

- Cleanliness Check all surfaces for leakage (oil, fuel, or battery fluid) or foreign objects. Report any leakage to the proper maintenance personnel.
- Structure Inspect the machine structure for dents, damage, weld or parent metal cracks or other discrepancies.
   Report this to the proper maintenance personnel.

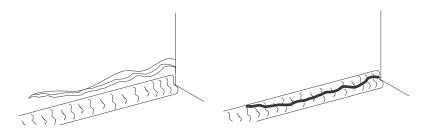


Figure 1. Parent Metal Crack


Figure 2. Weld Crack


- Decals and Placards Check all for cleanliness and legibility. Ensure none of the decals and placards are missing. Ensure all illegible decals and placards are cleaned or replaced (refer to Section – Decal Installation).
- 4. Operation & Safety Manuals Ensure that a copy of the Operation & Safety Manual, AEM Safety Manual (ANSI markets only), and ANSI Manual of Responsibilities (ANSI markets only) is enclosed in the weather resistant storage container.
- Walk-Around Inspection Perform as instructed in Section Walk-Around Inspection.
- 6. **Battery** Charge as required.
- 7. **Hydraulic Oil** Check the hydraulic oil level in the pump reservoir, add as required (refer to Section Operator Maintenance).
- 8. **Accessories/Attachments** Refer to the Accessories section in this manual or the accessory installed upon the machine for specific inspection, operation, and maintenance instructions.
- Function Check Once the Walk-Around Inspection is complete, perform a functional check of all systems in an area free of overhead and ground level obstructions. Refer to Section – Machine Controls, Indicators, And Operation for more specific instructions on the operation of each function.

- Platform Gate Keep gate and surrounding area clean and unobstructed. Ensure the gate closes properly and is not bent or damaged. Keep gate closed at all times except when entering/exiting the platform and loading/unloading materials.
- Lanyard Attach Points JLG Industries, Inc. recommends personnel in the platform wear a full body harness with a lanyard attached to an authorized lanyard anchorage point.

### **A WARNING**

If the machine does not operate properly, turn off the machine immediately! Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

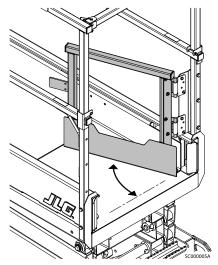




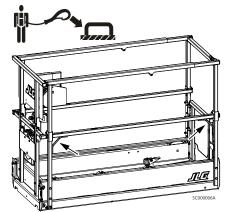


Figure 4. Lanyard Attach Points

#### 2.4 WALK-AROUND INSPECTION

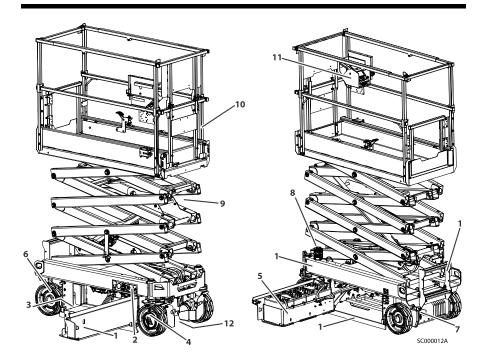

#### 2.4.1 General

Begin the Walk-Around Inspection at Item 1, as noted on the diagram. Continue checking each item in sequence for the conditions listed in the following checklist.

### **A WARNING**

To avoid possible injury, be sure machine power is off. Do not operate machine until all malfunctions have been corrected.

### <u>NOTICE</u>

Do not overlook visual inspection of chassis underside. Checking this area may result in discovery of conditions which could cause extensive machine damage.

**INSPECTION NOTE:** On all components, make sure there are no loose or missing parts, all parts are securely fastened, and no visible damage, leaks, or excessive wear exists in addition to any other criteria mentioned.

 Frame/Chassis/Ladder – See Inspection Note. Ensure that pothole protection (PHP) components on frame are in place, undamaged, not bent or worn. Side compartment doors open and close properly.

- 2. **Ground Controls** Placard secure and legible, control switches return to neutral position when activated and released, emergency stop switch functions properly. Control markings legible.
- 3. **Hydraulic Pump/Motor, Control Valve Installation** No unsupported wires or hoses; no damaged or broken wires. See Inspection Note.
- 4. Front Wheels, Tires, Drive Motor, Steer Linkage, and Steer Cylinder Wheel bolts properly secured. (refer to wheel and tire information section). See Inspection Note.
- 5. **Battery Compartment** See Inspection Note.
- Rear Wheels and Tires Wheel bolts properly secured (refer to wheel and tire information in Section — Operator Maintenance). Inspect wheels for damage and corrosion, check hydraulic brake hoses for damage or leakage. See Inspection Note.
- 7. Manual Descent Control See Inspection Note.
- Beacon(s) (If Equipped) See Inspection Note.
- 9. Scissor Arms, Pivot Pins, Sliding Wear Pads, Lift Cylinder See Inspection Note.
- Platform/Rail Gate Assembly Deck extension slides in and out and locks in place properly. Gate closes properly. All fold-down rail pins (if equipped) in place and secure. See Inspection Note.
- Platform Control Console Ensure that the control console is firmly secured in the proper location. Placards secure and legible, control lever and switches return to neutral when activated and released, and emergency stop switch function properly, required manuals in storage box.
- 12. Static Strap See Inspection Note.

#### 2.5 FUNCTION CHECK


Perform the Function Check as follows:

- 1. From the **Ground Control Panel** with no load in the platform:
  - Ensure that the key selector switch and the platform lift switch operates properly.
  - b. Ensure that all machine functions are disabled when the Emergency Stop Button is depressed.
  - c. With platform raised a few feet (1 m), ensure that the manual descent control (T-handle located at the left rear of the machine, next to the battery charger) lowers the platform properly.
  - d. Check that Pothole Protection system bars are fully lowered when the platform is raised.

Platform Fully Lowered Pothole Bars Raised



Platform Elevated Pothole Bars Fully Lowered



#### 2. From the Platform Control Console:

- a. Ensure that the control console is firmly secured in the proper location.
- b. Ensure that all guards protecting switches are in place.
- c. Operate all switch functions, drive/lift mode select switch, and horn button.
- d. Operate all platform joystick functions to ensure proper operation of drive, lift, steer, and enable trigger switch operation.
- e. Ensure that all machine functions are disabled when the platform Emergency Stop Button is depressed.
- f. Ensure all machine functions stop when function control is released or when joystick trigger is released.
- g. With the platform elevated on a smooth, firm, level surface with no overhead obstructions, drive the machine to check if the high drive cutout speed limit is engaged at the height indicated in *Table High Drive Cutout Height*, page 32. Ensure drive speed is reduced from a high speed to a slower speed.

 
 MODEL
 HIGH DRIVE SPEED CUT-OUT HEIGHT
 DRIVE SPEED REDUCTION

 ES1932i ES1932
 67 in (1.7 m)
 3.0 mph (4.8 kph) to 0.5 mph (0.8 kph)

Table 4. High Drive Cutout Height

#### 3. With the platform in the transport (stowed) position:

- Drive the machine on a grade, not to exceed the rated gradeability, and stop to ensure the drive motor brakes hold.
- b. Check the tilt indicator light to ensure proper operation. The light should be illuminated if tilted beyond allowed settings in Table – Tilt Activation Setting, page 33

**Note:** When the tilt indicator warning is activated, drive and lift up functions are disabled and the platform must be fully lowered (stowed) to drive

Table 5. Tilt Activation Setting

MODEL	TILT SETTING		N . D E	
MODEL	(front to back)	(side to side)	Maximum Platform Elevation	
		3.75°	0 - 15 ft (0 - 4.6 m)	
ES1932i	2.75°	3.0°	15 - 17 ft (4.6 - 5.2 m)	
		2.75°	17 - 19 ft (5.2 - 5.8 m)	
ES1932(AUS)	3.75°	3.0° - outdoor & indoor	0 - 15 ft (0 - 4.6 m)	
		2.0° - outdoor & indoor	15 - 17 ft (4.6 - 5.2 m)	
		1.5° - outdoor & indoor	17 - 19 ft (5.2 - 5.8 m)	
ES1932(All Other Markets)	3.75°	3.0° - outdoor & indoor	0 - 15 ft (0 - 4.6 m)	
		2.0 ° - outdoor 2.25° - indoor	15 - 17 ft (4.6 - 5.2 m)	
		1.5° - outdoor 1.75° - indoor	17 - 19 ft (5.2 - 5.8 m)	

Note: ES1932i is not available in AUS market.

This Page is intentionally left blank

# SECTION 3 Machine Controls, Indicators, and Operation

#### 3.1 GENERAL

### NOTICE

The manufacturer has no direct control over machine application and operation, the user and operator are responsible for conforming with good safety practices.

This section provides the necessary information needed to understand machine controls and indicators.

### WARNING

Do not raise platform unless the machine is on a smooth, firm surface, within the limits of the maximum operating slope, free of obstructions and holes.

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movement do not return to the off or neutral position when released.

If the platform does not stop when a control switch or lever is released, use the emergency stop switch to stop the machine.

#### 3.2 DESCRIPTION

This machine is a Mobile Elevating Work Platform (MEWP) used to position personnel along with their necessary tools and materials at work locations. The machine can be used to reach work areas located above machinery or equipment positioned at ground level.

This machine has a primary operator control station in the platform. From this control station, the operator can drive and steer the machine in both forward and reverse directions and raise and lower the platform.

The machine can be driven on a smooth, firm surface within the limits of the maximum operating slope from an elevated platform position. Refer to Steering And Traveling for specific requirements.

The machine also has a ground control station which can override the platform control station. Ground controls operate lift up and down. Except for performing inspections and function checks, ground controls are to be used only in an emergency to lower the platform to the ground should the operator in the platform be unable to do so.

#### 3.3 OPERATING CHARACTERISTICS AND LIMITATIONS

#### 3.3.1 Placards

Important points to remember during operation are provided at the control stations by DANGER, WARNING, CAUTION, NOTICE, IMPORTANT and INSTRUCTION placards. This information is placed at various locations for the express purpose of alerting personnel of potential hazards constituted by the operating characteristics and limitations of the machine. See foreword for definitions of placard safety signal words.

#### 3.3.2 Capacities

Raising platform above horizontal with or without any load in platform is based on the following criteria:

- 1. Machine is positioned on a smooth, firm surface within the limits of the maximum operating slope.
- 2. Load is within manufacturer's rated capacity.
- All machine systems are functioning properly.

#### 3.3.3 Stability

This machine, as originally manufactured by JLG and operated within its rated capacity on a smooth, firm surface, within the limits of the maximum operating slope, provides a stable aerial platform for all platform positions.


#### 3.4 PLATFORM LOADING

The platform maximum rated load capacity is shown on a placard located on the platform billboard and is based upon the machine positioned on a smooth, firm surface within the limits of the maximum operating slope. Refer to *Section – Machine Specifications* for the maximum platform capacity.

The platform is entered through an entry gate at the rear of the platform. Keep entry gate closed at all times except when entering/exiting the platform and loading/unloading materials.

**Note:** It is important to remember that the load should be evenly distributed on the platform. The load should be placed near the center of the platform when possible.

### 3.5 MACHINE CONTROL LOCATIONS

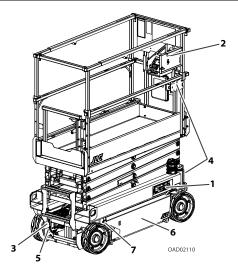

- 1. Ground Control Station
- 2. Platform Control Station
- 3. Platform Manual Descent Control (T-Handle)
- 4. AC Plug (for Platform AC Receptacle Outlet Box)
- 5. AC Plug (Battery Charger Input)
- 6. Side Compartment Doors (Both Sides)
- 7. Side Compartment Door Latch Location (Both Sides)

### 3.6 BATTERY CHARGING

**Note:** Park the machine in a well ventilated area before charging.

# CAUTION

Only plug the charger into a properly installed and grounded outlet. Do not use ground adaptors or modify plug. Do not touch non-insulated portion of output connector or non-insulated battery terminal.

Do not operate charger if the AC supply cord is damaged or if the charger has received a sharp blow, been dropped, or otherwise damaged in anyway.

Always disconnect the charger AC supply before making or breaking the (POS/NEG) connections to the battery.

Do not open or disassemble charger.

The battery charger AC input plug is located inside the frame at the left rear of the machine next to the battery charger. See charger specific information in Section — General Specifications and Maintenance.


- 1. Connect the charger AC input plug to a grounded outlet using a 3 wire heavy duty extension cord.
- After connecting the charger to an AC outlet at the start of the charging cycle, verify normal operation of the LED indicators on the charger (refer to Section — Operator Maintenance).

**Note:** Current battery charge state can also be seen on the platform control station panel LEDs or the MDI indicator (if equipped) on the ground control station when machine is powered up.

3. The batteries are fully charged when all three GREEN LED indicators on the platform control station or MDI battery charger status panel are illuminated.

**Note:** If the charger is left plugged in, the charger will automatically restart a complete charge cycle if the battery voltage drops below a minimum voltage, or if 30 days has elapsed.

### 3.7 GROUND CONTROL STATION

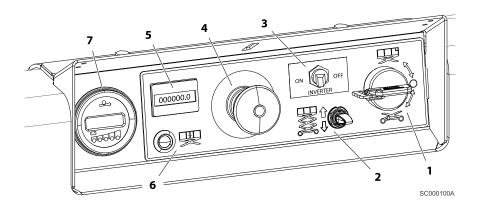

- 1. Ground/Platform/OFF Key Selector Switch
- 2. Platform Lift/Lower Switch
- 3. Inverter ON/OFF Switch (If Equipped)
- 4. Ground Emergency Stop Button
- 5. Hourmeter
- 6. Overload Indicator
- 7. MDI Indicator (If Equipped)

#### 3.7.1 Ground Control Station Functions

#### **Ground Emergency Stop Switch**

Power is turned on by pulling the switch out, and is turned off by depressing switch. A two-position, red, mushroom-shaped emergency stop switch, when positioned to ON with the key selector switch positioned to ground, furnishes operating power to the ground control station key switch. In addition, the switch can be used to turn off power to the function controls in the event of an emergency.



# **A** WARNING

Do not operate from ground control station with personnel in the platform except in an emergency.

#### Ground/Platform/OFF Key Selector Switch

The key selector switch on the Ground Control Station functions to direct electrical power to the desired control station.

With the switch turned to the ground position (1), power is supplied to the controls at the Ground Control Station. When the switch is turned to the platform position (2), power is supplied to the controls at the Platform Control Station. The switch should be set to the off position (3) when not using machine or parking the machine overnight.



#### Hourmeter

The machine is equipped with an hour meter to indicate the number of hours the machine has been operated.

00000 HOURS

### Inverter ON/OFF Switch (If Equipped)


When switched on the inverter converts the DC voltage stored in the on-board batteries to AC voltage for use at the AC receptacle outlet mounted on the platform rail.

### MDI Indicator (If Equipped)

The Multifunction Digital Indicator (MDI) displays a Battery Discharge Indicator (BDI), a LCD display showing the current hourmeter reading, a system distress LED, and Diagnostic Trouble Codes (DTC) when a functional problem occurs with the machine. When a problem occurs and a DTC Code displayed:

- A LED wrench icon (1) LED illuminates.
- A three to five digit DTC code will display on the DTC LCD display (2) below the wrench icon.

Note: When more than one DTC exists, each DTC will be displayed on the LCD for three seconds before changing to the next DTC. Once the last active DTC is displayed, the display will recycle indefinitely until the DTCs are corrected. For DTCs and descriptions, refer to Section 6.7.

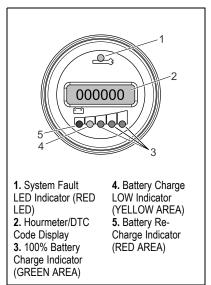


Also located on the MDI are Battery Discharge Indicators (BDI) (3, 4, 5). The three green LEDs indicate the level of charge (voltage) remaining in the batteries.

Note: When the battery voltage is low and will need a charge soon, the yellow LED (4) begin to flash.

BDIs and the hourmeter display under normal operating conditions. When a DTC exists other than 00x DTCs, the BDI LEDs and hourmeter are not be displayed. Additionally, when the platform is elevated and the machine is driving in creep mode, the turtle icon is displayed.

### Overload Indicator (LSS)

The Overload Indicator indicates when the platform has been overloaded. An audible alarm will also signal when the platform is overloaded.





Note: When ambient temperatures are below freezing, the LSS will have a reduction in available capacity. This will trigger the LSS before achieving the maximum allowable capacity.

#### Platform Lift/Lower Switch


A three position, momentary contact lift control switch provides raising and lowering of the platform from the Ground Control Station.

**Note:** There will be a brief delay between switch activation and movement of the platform.

When operating platform from the ground controls, activate the Lift/Lower switch to up position and hold to raise platform, or down position and hold to lower an elevated platform. Release to stop all movement.



### 3.8 PLATFORM CONTROL STATION

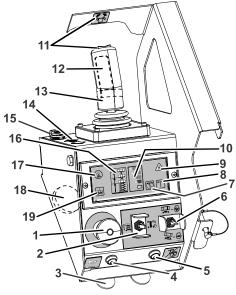

SC000937A

- 1. Emergency Stop Switch
- 2. Lift/Drive Select Switch
- 3. Mobile Phone Cradle (If Equipped)
- 4. Horn Button
- 5. Indoor/Outdoor Operation Mode Switch
- 6. Drive Speed Select Switch
- 7. Indoor Mode Capacity Indicator
- 8. Outdoor Mode Capacity Indicator
- 9. System Fault Indicator
- 10. Battery Discharge Indicator

- 11. Steer Control Switch and Decal
- 12. Trigger Enable Switch
- 13. Joystick Controller
- 14. Black/White Directional Arrow
- **15.** USB Port (If Equipped)
- **16.** Variable Tilt Platform Restricted Height Indicator
- 17. Tilt Indicator
- 18. Alarm
- 19. Overload Indicator (LSS)

Note: ES1932i is rated for INDOOR USE only.

#### 3.8.1 Platform Control Station Functions

#### Alarm


This alarm mounted on the front of the platform control station will sound for various machine conditions or warnings such as, system ready chirp or if the machine tilt warning is activated.

### Arm Guards (If Equipped)

If the machine is equipped with electronic arm guards, the platform will stop lowering at a predetermined height and the machine's beacons will flash at a different rate to warn ground personnel. The machine can continue lowering after a three (3) second delay and re-engaging the lowering function. Once the lowering function is re-engaged an audible alarm will sound. After a three second delay, the platform will continue lowering.

#### **Battery Charge Indicator**

The battery charge indicator displays the current charge status of the onboard batteries



- RED LED ON solid = batteries low
- RED LED ON and GREEN LEDs ON = batteries FULL charge



#### **Drive/Lift/Steer Joystick Control**

**Trigger (Enable) Switch** - This trigger switch is located on the front of the joystick controller. It acts as an enable and must be depressed before operating the drive, steer, and lift functions. When released, the function in operation will stop.

The speed on all selected functions is proportionally controlled by the distance from the neutral (center) position of the joystick controller.

Note: Once the trigger switch is pressed, the operator has (5) seconds to begin operating a function. After 5 seconds, the trigger switch must be released and pressed again to operate a joystick function.

**Note:** If the machine is also equipped with a footswitch, depress the footswitch in conjunction with the trigger (enable) switch located on the joystick controller. Power is removed from the platform controls when the footswitch is released.

**Steer Switch** - The steer switch is a thumb-operated switch located at the top of the joystick controller handle. Depressing the switch to the right will steer the wheels to the right. Depressing the switch to the left will steer the wheels to the left.

Joystick Controller - This controls drive and lift.

#### **Drive Speed Select Switch**

The two-position speed switch controls high or low range drive speed. Use high speed in unobstructed open, flat, and level work areas. Use low speed in close work areas with obstacles, other machinery or personnel to avoid.



**Note:** Drive speed automatically reduces to low drive when the platform is raised above the stowed position, regardless of speed switch position.

### **Emergency Stop Switch**

Note: Both the ground and platform emergency stop buttons must be set to ON in order to operate the machine.

When power is directed to the platform from the ground control station, the platform emergency stop switch is turned on by pulling the switch out (on), and is turned off by pushing the switch in (off). The two-position, red, mushroom-shaped emergency stop switch functions to provide power to the platform control station and also to turn off power to machine functions in the event of an emergency.

# NOTICE

Always position emergency stop switch to off position (pushed in) when machine is not in use.

#### Forward/Reverse/Lift/Lower Direction Arrow

This decal indicates the proper direction to mount the platform control box, with the black arrow pointing to the front of the machine. The black/white arrow also indicates the direction to move the joystick control per the lift/drive selector switch decal for the lift and the drive select functions.




#### Horn

This push-button switch, when pressed, permits the operator to warn job site personnel when the machine is operating in the area.



#### Indoor/Outdoor Operation Indicator

The Indoor (GREEN) indicator and the Outdoor (YELLOW) indicator displays which mode the machine is currently set to operate in.





The Indoor Operation Indicator displays when Indoor Operation mode is selected. Indoor Mode is to be used in areas defined for INDOOR USE.



The Outdoor Operation Indicator displays when Outdoor Operation mode is selected. Outdoor Mode is to be used in areas defined for OUTDOOR USE.



#### Indoor/Outdoor Operation Mode Switch

This button will toggle between the indoor/outdoor operation modes.

Note: ES1932i is rated for INDOOR USE only.



Note: INDOOR USE is use of a MEWP in areas shielded from wind so that there is no wind. OUT-DOOR USE is use of a MEWP in an environment that can be exposed to wind.

Prior to selecting Indoor Mode, ensure the machine will be used in an area that is shielded from wind so that there is no wind.

CE/UKCA machines only: To switch from one mode to another, the platform must be in the stowed position. If the mode switch is pressed while the machine is elevated, the indicator will flash but the machine state will not change.

# **A WARNING**

Do not operate the machine in INDOOR MODE while in OUTDOOR USE. Follow all information on the platform capacity decal for the selected operating mode. Failure to comply could result in machine tip over, personal injury, or death.

### Lift/Drive Select Switch

**Note:** When selecting between the lift and drive functions the joystick control must be returned to the neutral position for approximately 1/2 second before the function change is operable.



This toggle switch is used to select operation of either the drive or lift function. After selecting a function, the joystick controller must be used in order to activate that function. Only change the function selected, with the joystick in the neutral position. Otherwise, the function selected will not change until the joystick is returned to the neutral position.

### Mobile Phone Cradle (If Equipped)

Provides an enclosed area for mobile phones in the platform.

### Overload Indicator (LSS)

The Overload Indicator indicates when the platform has been overloaded. An audible alarm will also signal when the platform is overloaded.




Note: If the Overload Indicator is illuminated, further elevation will be prevented. Reduce the weight in the platform to not exceed the rated workload indicated on the capacity decal, then the controls will work again.

Note: When ambient temperatures are below freezing, the LSS will have a reduction in available capacity. This will trigger the LSS before achieving the maximum allowable capacity.

#### Raising And Lowering Platform

- If the machine was shut down, place the key selector switch to the platform position.
- 2. Position both emergency stop switches, to the ON position.
- 3. Position the lift/drive select switch to lift.
- 4. Squeeze and hold the trigger switch, and move the joystick back (platform up - white arrow direction) or move the joystick forward (platform down - black arrow direction) and hold until desired elevation is reached. Releasing the trigger switch or moving the joystick back to its center position will stop the function being operated.



#### Steering

On the platform control station, position the lift/drive select switch to the drive position.

To steer the machine, engage trigger switch and the thumb operated steer rockerswitch on the joystick handle. Press to the right for steering right, or to the left for steering left. When released, the switch will return to the center-off position and the wheels will remain in the previously selected position. To return the wheels to the center position, the switch must be activated in the opposite direction until the wheels are centered.





### Steering And Traveling

- 1. Place key selector switch at the ground control station to platform operation.
- 2. Position emergency stop switches, one at the platform and one at the ground control station to the ON position.

# **A WARNING**

Do not drive with platform raised except on a smooth, firm surface, within the limits of the maximum operating slope, free of obstructions and holes.

To avoid loss of travel control or upset on grades and side slopes, do not drive machine on grades or side slopes exceeding those specified in Section 6.

Before driving, locate the decals with the black/white orientation arrows on the chassis and the platform controls. Move the joystick in the direction of the black or white arrow that matches the color of the arrow on the chassis for the intended direction of travel.

If the tilt indicator warning light/alarm is activated while driving with platform raised, lower platform completely and drive to a smooth, firm surface, within the limits of the maximum operating slope.

#### System Fault Indicator

When this indicator light is flashing, a system fault has occurred, possibly stopping machine operation.

Check the MDI Indicator (if equipped) on the Ground Control Station to see if a DTC is displayed.

If the code cannot be cleared by the operator, the machine will require service by a qualified JLG mechanic.



#### Tilt Indicator Warning Light and Alarm

A red warning light on the control panel illuminates and an audible alarm sounds when the chassis is at or beyond the tilt cutout settings.




# **A WARNING**

If the tilt indicator warning light/alarm is activated when platform is raised, lower platform and drive to a smooth, firm surface, within the limits of the maximum operating slope.

#### **Traveling Forward And Reverse**

Position the platform lift/drive select switch to drive/steer position. Squeeze the trigger switch on front of the joystick and move the joystick forward to drive forward, or backward to drive in reverse. The drive system is proportional: for additional drive speed, push the joystick further from the neutral position in the direction of travel. Releasing the trigger switch or returning the joystick to center will stop machine movement.



Note: To ensure proper operation of the desired platform function, move the joystick in the direction of the black or white arrow that matches the color of the arrow on the chassis for the intended direction of travel.

#### **USB Port (If Equipped)**

Provides a USB port in the platform.

#### Variable Tilt - Platform Restricted Height Indicator

This indicator shows the maximum allowable platform elevation when the machine is within the limits of the variable tilt envelope. When activated, allowable platform height will be shown in one of three height ranges, depending on the amount of tilt detected by the machine's tilt sensor. See tables in Section 2 for tilt angle - platform operating height restrictions.



### 3.9 PLATFORM MANUAL DESCENT

Use the Platform Manual Descent in the event of total power failure to lower the platform using gravity. The manual descent control T-handle is located on the left rear of the machine, just below the platform ladder. Look for the instruction decal located beside the release handle.


The lowering procedure is as follows:

Locate the manual descent control T-handle.


# **A WARNING**

Keep hands and arms out of the path of the scissor arms and platform while lowering.

Grasp the T-handle and slowly pull out to lower the scissor arms/platform. When the platform is lowered to the desired level, allow the T-handle to return to its closed position.

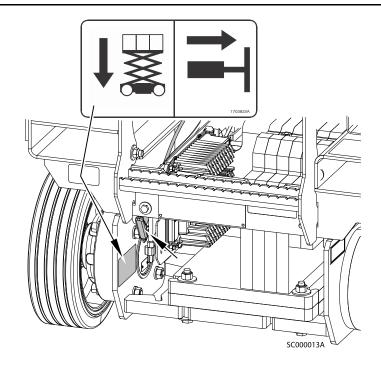

# 3.10 GRADE AND SIDE SLOPE

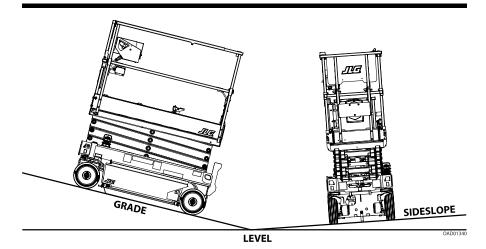

# 3.11 PLATFORM EXTENSION

This machine is equipped with an extension deck that allows the operator better access to certain work areas. The deck extension adds length to the front of the platform.

# **A** WARNING

For maximum capacity of the deck extension see Machine Specifications section or refer to the capacity placard on the platform billboard.

# **A** CAUTION


Do not lower without completely retracting the platform extension.

#### To extend the deck:

- 1. Press foot down on locking mechanism lever (1) until it clears the rear platform extension lock (3).
- While holding the lever, grasp the top handrails (2) and push forward until the locking mechanism pin locks into the forward platform extension lock (4 or 5).

#### To retract the deck:

- 1. Press foot down on locking mechanism lever (1) until it clears the forward platform extension lock (4 or 5).
- 2. Grasp the top handrails (2) and pull back until it the locking mechanism pin locks into the rear platform extension lock (3).

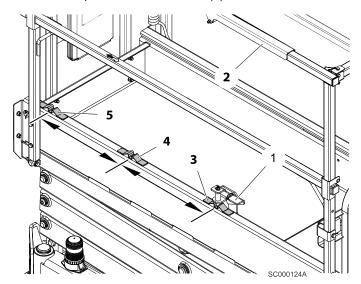

# 3.12 PARKING AND STOWING MACHINE


1. Drive the machine to a well-protected and well-ventilated area.

2. Ensure the platform is fully lowered.

# NOTICE

When the machine is shut down for overnight parking or battery charging, the emergency stop and power select switches must be positioned to off to prevent draining the batteries.

- 3. At the ground control station, turn the platform ground selector key switch to OFF and remove the key to disable the machine and prevent unauthorized use.
- 4. At the ground control station, depress emergency stop switch to the off position.
- 5. If necessary, cover the platform control box, instruction placards, caution and warning decals so that they will be protected from hostile environment.
- Chock at least two wheels when parking the machine for an extended period of time.

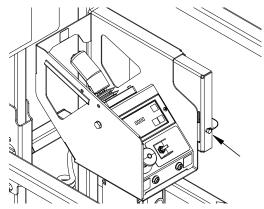

**Note:** For added protection, the platform control station can be secured to its mounting plate.

Additionally, the side compartment doors can be secured by placing a padlock through the holes provided just below the door latch on each door.

# 3.13 PLATFORM RAILS FOLD-DOWN PROCEDURE (IF EQUIPPED)

# **A WARNING**

Only fold down the rails when the machine is in the stowed (platform fully lowered) position. Do not raise the platform with the rails folded down. The rails must be in the upright position and properly pinned when raising the platform.

The platform rails fold down from the mid-rail only, except for the rear gate rail.

#### 3.13.1 Platform with Rail-in-Rail Extension Deck

The platform rails fold down in the following sequence (refer to Figure — Rail-in-Rail Fold-Down Sequence., page 51):

1. Pull pin and fold REAR gate top rail in against RIGHT side rail. Remove the platform control station and place on the floor of the platform.

**Note:** Front deck extension top rail pins must be removed and deck extension top side rails slid towards rear of machine before lowering side rails. Place pins in the lower holes of the extension side top rails before folding main platform side rails down.

- 2. Fully open the swing gate and hold while folding down the RIGHT side rail.
- 3. Fold down LEFT side rail.
- 4. Fold down FRONT platform extension rail.

To raise the rails back to the upright position, unfold the rails in the reverse sequence they were folded. Firmly pull the rails back up into position and replace the bail pins into the rails.

# **A WARNING**

After the rails have been folded down, use extreme caution when exiting and entering the platform. Enter and exit platform only at the gate area and ladder provided.

# **A** WARNING

If driving machine with the platform control station from ground, do not hang the control box on any part of the machine while driving. Hold the control box and keep at least 3 ft (1 m) distance from machine.


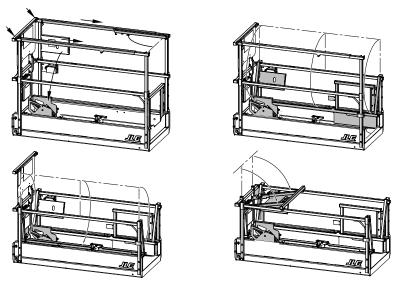


Figure 5. Rail-in-Rail Fold-Down Sequence

### 3.13.2 Platform with Dual Rail Extension Deck

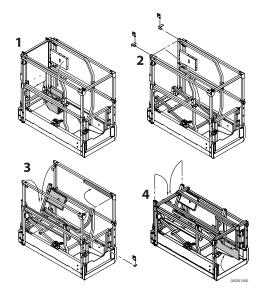

# **A WARNING**

Only fold down the rails when the machine is in the stowed (platform fully lowered) position. Do not raise the platform with the rails folded down. The rails must be in the upright position and properly pinned when raising the platform.

1. Remove platform control box and place on platform deck.

- 2. Remove two pins at the top front rails, then fold down the front rail panel to the platform floor.
- 3. Fold down inner extension rails to the platform floor. Remove rail pin at top rear rail and fold in against the right side top rail.
- 4. Fold down outer platform rails towards the platform floor

To raise rails back to the upright position, unfold the rails in the reverse sequence they were folded and replace the rail pins into the rails.

# **A WARNING**

After the rails have been folded down, use extreme caution when exiting and entering the platform. Enter and exit platform only at the gate area and ladder provided.

# **A WARNING**

If driving machine with the platform control station from ground, do not hang the control box on any part of the machine while driving. Hold the control box and keep at least 3 ft (1 m) distance from machine.

### 3.13.3 Platform with Quick-Fold Rail System

- 1. Release the two draw latches (1) at the front of the rail system.
- 2. Squeeze both triggers (2) at the rear right and left sides of the rail system.

**Note:** When the levers are squeezed, the latch is released. This allows the upper and lower halves of the rail system to separate.

3. With both hands still on the triggers (2), lower rails.


To raise the rails back to the upright position, grab the left and right side rails and pull back and upward until the latches lock into place. Move to the front of the rail system and secure the draw latches (1) into the closed position.

# **A** WARNING

After the rails have been folded down, use extreme caution when exiting and entering the platform. Enter and exit platform only at the gate area and ladder provided.

# **A** WARNING

If operating (driving) machine with platform control station from ground, with rails folded, keep at least 3 ft (1 m) distance from machine.

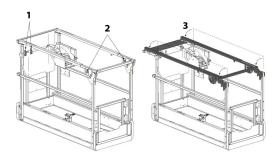


### 3.13.4 Platform with Narrow Access Rails


**Note:** This rail option is only available for ES1932 machines in the ANSI market. It may be used in both indoor and outdoor configurations.

**Note:** Some platform accessories cannot be used when the rails are folded. Refer to Options/Accessories Relationship tables for more information.

- 1. Move platform control box from front of machine to rear of machine.
- 2. Remove pins from top front corners of platform rails.
- 3. Slightly lift up top rails and pull back to clear detents. Replace pins to the holes beneath the rails.

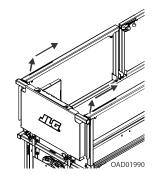


Rotate levers at the rear of the top platform rails and pull back to release the rails.

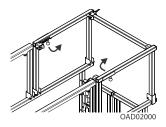

5. Fold side rails down to the platform floor.

- 6. Remove mid-rail pins at front of the platform to release the billboard.
- 7. Pull up the black billboard cover to access a tray table.
- 8. Pull up the hanging bar and lock into place, then secure with a pin.

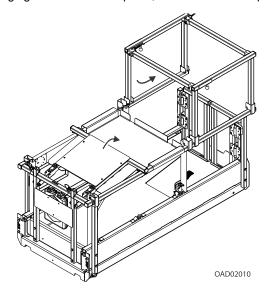

# 3.14 MACHINE LIFTING AND TIE DOWN

# 3.14.1 Lifting


The machine may be lifted using a fork lift truck. Lift only from the rear of the machine and only with the platform in the stowed position. Adjust the width of the **forklift truck**, **lifting tines (1)** to properly fit the machine forklift pockets. Slide the forklift tines into the forklift pockets and carefully lift machine.

The machine can also be lifted using a spreader bar and four equal length straps or chains capable of supporting the full gross weight of the machine. Lift only using the lifting lugs provided at the four corners of the machine.


# WARNING

Lifting the machine from the sides using a fork truck is not recommended by JLG. In the event that the machine needs to be lifted from the sides, caution must be used to avoid jamming the pothole protection bars up against the frame.

Every time the machine is lifted from the side, be sure to test the pothole protection system before the machine is put back into operation.

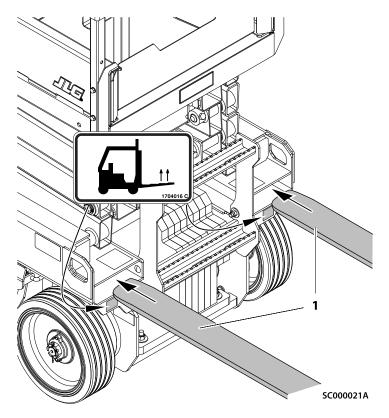

1. Forklift Lifting Tines

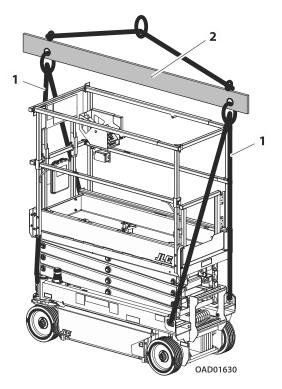


1. Four chains or lifting straps of equal length

2. Spreader Bar Assembly

### 3.14.2 Tie Down

When transporting the machine, the platform must be fully lowered in the stowed position with the machine securely tied down to the truck or trailer deck. There are two tie-down and one lift lugs located at the front and two tie-down/lift lugs on the rear of the machine.

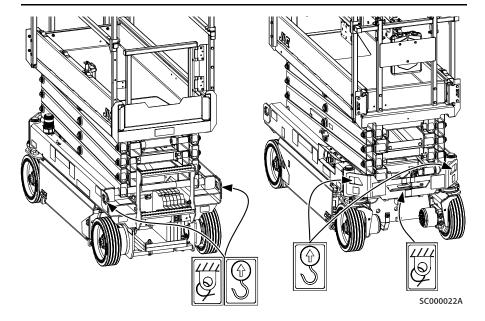


# **3.15 TOWING**


It is not recommended that this machine be towed except in the event of an emergency, such as a machine malfunction or a total machine power failure.

If the machine must be towed, the machine is equipped with a push button to electrically release the brakes. Look for the yellow button at the left rear of the machine

- Chock wheels or secure machine with tow vehicle.
- 2. Pull out the emergency stop switch and position the keyswitch to ground mode.
- Press and hold the yellow button for one second to release the brakes. The alarm will sound, then the pump motor will run for several seconds to release the brakes.
- 4. To reset the brakes, push the yellow button again, recycle power to the machine, or position the keyswitch to platform mode.

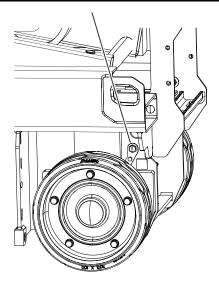

# 3.16 BEACONS

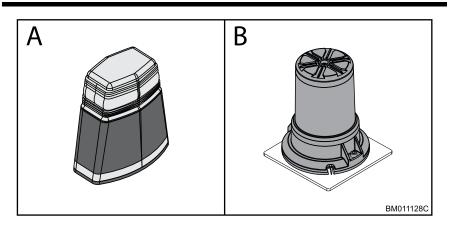

A. LED Motion / Amber Beacon (CS550)

B. Beacon

**Note:** Image for reference only. Beacon design may vary based on beacon type, machine model and installation location.

### 3.16.1 ClearSky® LED Motion / Amber Beacon (CS550)

The ClearSky® CS550 is installed on ClearSky Smart Fleet™ equipped machines.

The CS550 can function as a machine beacon using multiple colors and flash patterns for communication and identification purposes. In addition to amber, colors include: red, blue, green, cyan, and white. The ClearSky Smart Fleet mobile app can command visual alerts or audible alarms to assist in machine identification.

The CS550 also functions as a visible connectivity point for ClearSky Smart Fleet. Refer to the ClearSky Smart Fleet section for more information.

#### 3.16.2 Amber Beacon

This amber-colored beacon flashes in a consistent pattern to alert those nearby that the machine power is on. The device may also use different flash patterns to identify specific machine alerts.

### 3.17 CLEARSKY SMART FLEET™

ClearSky Smart Fleet™ integrates on-machine hardware with web-based software and a mobile app to provide fleet management data and analytics. Personnel with the appropriate permissions can access telematics and machine identification data using a dashboard visible in the ClearSky Smart Fleet web portal or the ClearSky Smart Fleet mobile app. (Navigation and visual configuration may vary between the web portal or mobile app.)

Features include machine monitoring such as fuel level and battery charge, remote analyzer tasks including diagnostic trouble codes or system alerts, and access control (if available) restrictions.

Refer to the Access Control and Beacons sections of this manual for more information. Visit the ClearSky section of the JLG website for more resources and information about accessing web portal or mobile app data.

# 3.18 ACCESS CONTROL - CLEARSKY SMART FLEET™ (IF EQUIPPED)

# **NOTICE**

Operator access to the machine may be placed into a restricted state remotely.

If a modification to a restricted state is required, contact the ClearSky Smart Fleet™ account owner. Only authorized personnel can make changes from within the web portal or mobile app.

This machine may be equipped with ClearSky Smart Fleet Access Control. Using the ClearSky Smart Fleet mobile app or web portal (remotely or locally), the machine can be placed into restricted states that limit machine functionality for all operators.

By using this machine, the operator acknowledges Access Control functionality, including restricted states, and accounts for it in their safe use plan.

### Restricted states may include:

- Speed Restricted Machine drive speed is restricted to low speed and lift speed is reduced.
- Speed and Function Restricted Machine drive speed is restricted to low speed and the platform is restricted to a fully-lowered position. In this state, once the platform is fully lowered, it is not permitted to leave that defined position.
- 3. Locked Out Machine has been locked out and will not operate (including engine start, if applicable).

**Note:** Restricted functionality may occur if the CS550 (ClearSky® LED Motion / Amber Beacon) is damaged or removed. A protective cage is available through JLG.

Machines equipped with ClearSky Smart Fleet Access Control are also equipped with the CS550. Refer to the ClearSky Smart Fleet and Beacons sections of this manual for more information.

At time of publication, Access Control is not available for CE/UKCA markets.

# 3.19 SAFETY DECAL LOCATIONS

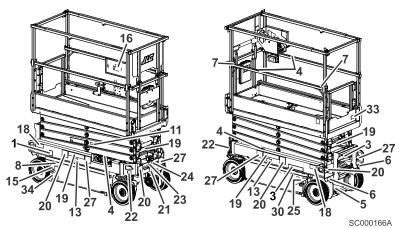


Figure 6. ES1932i, ES1932 Decals — View 1

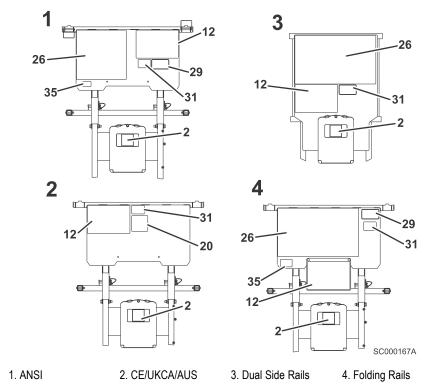


Figure 7. ES1932i, ES1932 Decals — View 2

Table 6. ES1932i, ES1932 Decal Legend

						,			
ITEM	ENGLISH	ENG/KOR	ENG/CHI (GB)	SPA/POR	ENG/SPA	ENG/FRE	CE/UKCA	AUS/MOL70 (Korea)	MOL70 (Ja- pan) (ES1932 Only)
1	1701504	1701504	1701504	1701504	1701504	1701504	1701504	1701504	1701504
2	1701640	1701640	1701640	1701640	1701640	1701640	1701640	1701640	1701640
3	1703813	1707022	1704344	1704341	1704339	1704340	1705670	1705670	1705670
4	1703819	1703819	1703819	1703819	1703819	1703819	1703819	1703819	1703819
2	1703822	1703822	1703822	1703822	1703822	1703822	1703822	1703822	1703822
9	1704016	1704016	1704016	1704016	1704016	1704016	1704016	1704016	1704016
7	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277
8	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412
11	1001220430	1001220430	1001220430	1001220430	1001220430	1001220430	1001220430	1001220430	1001220430
	1001256174 ES1932i								
12	1001256176 ES1932	1001256176 (AUS) 1001265048 (MOL70) ES1932	1001265048 ES1932						
5	1705647 - ES1932i	1705647 - ES1932i							
2	1705648 - ES1932	1705648 - ES1932							

Table 6. ES1932i, ES1932 Decal Legend (continued)

			Table 6.	Table 6. ES1932i, ES1932 Decal Legend (continued)	932 Decal Leg	end (continue	(p)		
ITEM	ENGLISH	ENG/KOR	ENG/CHI (GB)	SPA/POR	ENG/SPA	ENG/FRE	CE/UKCA	AUS/MOL70 (Korea)	MOL70 (Ja- pan) (ES1932 Only)
16	1001132359	1001132359	1001132359	1001132359	1001132359	1001132359	1001132359	1001132359	1001132359
18	1001162864	1001162864	1001162864	1001162864	1001162864	1001162864	1001162864	1001162864	1001162864
19	1001211777	1001215751	1001215752	1001216650	1001215754	1001215755	1001219172	1001219172	1001219172
20	1001211779	1001211779	1001211779	1001215748	1001211779	1001211779	1001219171	1001219171	1001219171
21	1001212290	1001212290	1001212290	1001212290	1001212290	1001212290	1001212290	1001212290	1001212290
22	1001212291	1001212291	1001212291	1001212291	1001212291	1001212291	1001212291	1001212291	1001212291
23	1001212292	1001212292	1001212292	1001212292	1001212292	1001212292	1001212292	1001212292	1001212292
24	1001212293	1001212293	1001212293	1001212293	1001212293	1001212293	1001212293	1001212293	1001212293
25	1001146794	1001146794	1001146794	1001146794	1001146794	1001146794	1001146795	1001146794	1001146794
26	1703816	1001162115	1705195	1704699	1704691	1704684	-	-	
27	ı	1001215750	1001215747	1001216648	1001215748	1001215749	-	_	1
29	1001231801	ı	1	1	_	1	1	-	1
31	1001092071	1001120621	1001120622	1001120623	1001120629	1001092580	1001092497	-	1
33	ı	ı	1001244298	1	_	1	1	-	1
34	1001223055	1001224048	1001224051	1001224052	1001224049	1001223971	_	_	I
35	1001228370	I	I	I	I	1001228370	1	-	I

This Page is intentionally left blank

# SECTION 4 Emergency Procedures

### 4.1 GENERAL

This section explains the steps to be taken in case of an emergency situation during operation.

### 4.2 INCIDENT NOTIFICATION

JLG Industries, Inc. must be notified immediately of any incident involving a JLG product. Even if no injury or property damage is evident, JLG must be contacted by telephone and provided with all necessary details.

USA: 877-JLG-SAFE (554-7233)

EUROPE: (32) 0 89 84 82 20

AUSTRALIA: (61) 2 65 811111

E-mail: productsafety@jlg.com

Failure to notify the manufacturer of an incident involving a JLG Industries product within 48 hours of such an occurrence may void any warranty consideration on that particular machine.

# NOTICE

Following any incident, thoroughly inspect the machine. Do not elevate the platform until it is certain that all damage has been repaired and that all controls are operating correctly. Test all functions first from the ground control station then from the platform control console.

### 4.3 EMERGENCY OPERATION

#### 4.3.1 Use of Ground Controls

# NOTICE

Know how to use the ground controls in an emergency situation.

Ground personnel must be thoroughly familiar with the machine operating characteristics and the ground control functions. Training should include operation of the machine, review and understanding of this section and hands-on operation of the controls in simulated emergencies.

### 4.3.2 Operator Unable to Control Machine

If the platform operator is unable to operate or control the machine:

- Other personnel should operate the machine from ground controls only as required.
- Only qualified personnel on the platform may use the platform controls. DO NOT CONTINUE OPERATION IF CONTROLS DO NOT FUNCTION NORMALLY.
- 3. Rescue equipment can be used to remove the platform occupant(s). Cranes and forklifts can be used to stabilize motion of the machine.

### 4.3.3 Platform Caught Overhead

If the platform becomes jammed or snagged in overhead structures or equipment, do the following:

- Shut off the machine.
- 2. Rescue all people in the platform before freeing the machine. Personnel must be out of the platform before operating any controls on the machine.
- 3. Use cranes, forklifts or other equipment to stabilize motion of the machine to prevent a tip over as required.
- 4. From the ground controls, carefully free the platform from the object.
- 5. Once clear, restart the machine and return the platform to a safe position.
- Inspect the machine for damage. If the machine is damaged or does not operate properly, turn off the machine immediately. Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

### 4.3.4 Righting of Tipped Machine

A fork truck of suitable capacity or equivalent equipment should be placed under the elevated side of the chassis, with a crane or other suitable lifting equipment used to lift the platform while the chassis is lowered by the forklift or other equipment.

### 4.4 PLATFORM MANUAL DESCENT

Use the Platform Manual Descent in the event of total power failure to lower the platform using gravity. The manual descent control T-handle is located on the left rear of the machine, just below the platform ladder. Look for the instruction decal located beside the release handle.


The lowering procedure is as follows:

Locate the manual descent control T-handle.

# **A WARNING**

Keep hands and arms out of the path of the scissor arms and platform while lowering.

2. Grasp the T-handle and slowly pull out to lower the scissor arms/platform. When the platform is lowered to the desired level, allow the T-handle to return to its closed position.

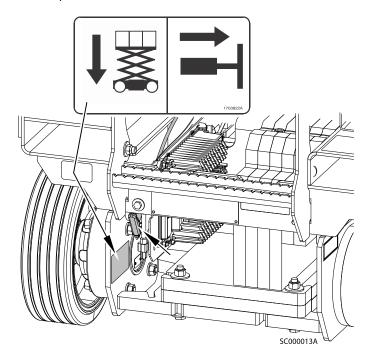

# 4.5 CLEARSKY SMART FLEET™ - LOCKED OUT STATE

The machine may be placed into a Locked Out state remotely through ClearSky Smart Fleet.

If the CS550 (ClearSky® LED Motion / Amber Beacon) is removed from a machine or disconnected from the control system through damage, the machine may also be placed into a Locked Out state.

# NOTICE

Contact the ClearSky Smart Fleet™ account owner if the machine is in a Locked Out state.

This Page is intentionally left blank

# **SECTION 5**Accessories

# 5.1 AVAILABLE ACCESSORIES

Table 7. ES1932i, ES1932 - Available Accessories

				Market			
ACCESSORY	ANSI (USA Only)	ANSI	CSA	CE/ UKCA	AUS	MOL70	China (GB)
1/2" Air Line	✓	✓	✓				
DC/AC Power Inverter	✓	✓	✓				
Magnetic Gate Latch	✓	✓	✓	✓	✓	✓	✓
Anti-Vandalism Package	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>
Platform Extension Handles	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>
Platform Worklights	✓	✓	✓	✓	✓	✓	✓
Footswitch						✓	
Heavy Duty Tool Tray	✓	✓	✓	✓	✓	✓	✓
SkySense®	✓	✓	✓	✓	✓	✓	✓

Table 8. ES1932 Only — Available Accessories

				Market			
ACCESSORY	ANSI (USA Only)	ANSI	CSA	CE/ UKCA	AUS	MOL70	China (GB)
Electrician's Tree	✓	✓	✓	✓	✓	✓	✓
Panel Carrier	✓	✓	✓	✓	✓	✓	✓
Pipe Racks	✓	✓	✓	✓	✓	✓	✓
Workstation	✓	✓	✓	✓	✓	✓	✓

Table 9. ES1932i, ES1932 - Options/Accessories Relationship Table

ACCESSORY	COMPATIBLE WITH (Note 1)	INCOMPATI BLE WITH	INTER CHANGEA BLE WITH (Note 2)
1/2" Air Line	All	_	
DC/AC Power Inverter	All	_	ı
Electrician's Tree (Note 3)	1/2" Air Line, Dual Rails, Quik-Fold Rails, Platform Worklights, Pipe Racks, Panel Carrier, Workstation, Platform Extension Handles, Inverter, Magnetic Gate Latch, Anti-Vandalism Package, Footswitch	SkySense, Quik-Access Rails	I
Magnetic Gate Latch	All	_	ı
Anti-Vandalism Package	All	_	_
Platform Extension Handles	1/2" Air Line, Platform Worklights, Pipe Racks, Panel Carrier, Electrician's Tree, SkySense, Inver- ter, Magnetic Gate Latch, Anti-Vandalism Pack- age, Footswitch	Dual Rails, Quik-Fold Rails, Quik-Ac- cess Rails,	_
Platform Worklights	1/2" Air Line, Dual Rails, Quik-Fold Rails, Quik-Access Rails, Workstation, Electrician's Tree, Platform Extension Handles, Inverter, Magnetic Gate Latch, Anti-Vandalism Package, Footswitch	Pipe Racks, Panel Carrier, SkySense	
Pipe Racks (Note 3)	1/2" Air Line, Quik-Fold Rails, Quik-Access Rails, Platform Extension Handles, Panel Carrier, Inver- ter, Magnetic Gate Latch, Anti-Vandalism Pack- age, Footswitch, Electrician's Tree	SkySense, Platform Work- lights, Dual Rails	-
Panel Carrier (Note 3)	1/2" Air Line, Quik-Fold Rails, Quik-Access Rails, Footswitch, Dual Rails, Magnetic Gate Latch, Pipe Racks, Inverter, Magnetic Gate Latch, Anti-Van- dalism Package, Footswitch, Platform Extension Handles	SkySense, Platform Worklights	I
Footswitch	All	_	_
SkySense	1/2" Air Line, Dual Rails, Quik-Fold Rails, Platform Extension Handles, Inverter, Magnetic Gate Latch, Anti-Vandalism Package, Footswitch	Platform Work- lights, Pipe Racks, Panel Carrier, Quik- Access Rails, Workstation, Electrician's Tree	-

Table 9. ES1932i, ES1932 - Options/Accessories Relationship Table (continued)

ACCESSORY	COMPATIBLE WITH (Note 1)	INCOMPATI BLE WITH	INTER CHANGEA BLE WITH (Note 2)
Heavy Duty Tool Tray	1/2" Air Line, Pipe Racks, Platform Extension Handles, Panel Carrier, Workstation, Electrician's Tree, Platform Worklights, Inverter, Magnetic Gate Latch, Anti-Vandalism Package, Footswitch	Dual Rails, SkySense	-
Workstation (Note 3)	1/2" Air Line, Quik-Fold Rails, Platform Work- lights, Pipe Racks, Panel Carrier, Electrician's Tree, Platform Extension Handles, Inverter, Mag- netic Gate Latch, Anti-Vandalism Package, Footswitch	Dual Rails, Quik-Access Rails, SkySense	-

Note 1: Any accessory not listed under "COMPATIBLE WITH" is assumed to be incompatible.

Note 2: Can be used on same unit but not simultaneously.

**Note 3:** A limit of two options can be utilized on the platform but must be mounted to opposite sides.

# 5.2 ANTI-VANDALISM PACKAGE

The Anti-Vandalism Package consists of two lockable covers for the Platform and Ground Control Stations that prevent unauthorized use of the machine. Locks are not provided with this kit.

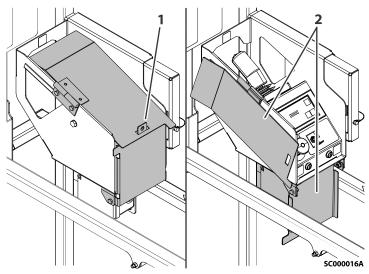
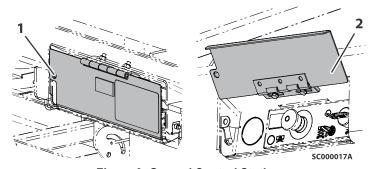


Figure 8. Platform Control Station

1. Lock Position (Covers Closed)

2. Covers Open



**Figure 9. Ground Control Station** 


1. Lock Position (Cover Closed)

2. Cover Open

### 5.3 DC/AC POWER INVERTER

The DC to AC Power Inverter converts DC voltage from the onboard system batteries to AC voltage for use at the platform AC output receptacle.

The inverter module is mounted on the inside of the battery compartment door.

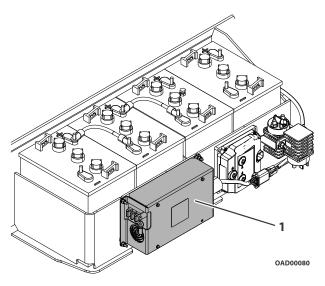

1. Inverter Module

#### 5.3.1 Specifications

DESCRIPTION		SPECIFICATION
Electrical System \	/oltage (DC)	24V
Power Inverter:		Power Bright
DC Input:	DC Input Voltage: Operating Temperature:	20 to 30 VDC -4° F (-20° C) to 113° F (+45° C)
AC Output:	Output Power (Continuous): Output Power (Surge): Output Power (AC): Output Voltage (AC): Output Frequency: Type:	900W 1800W 7.5A 117V+/- 10% 60 Hz Modified Sine Wave
Protection:	Output Reverse DC Polarity:	3 X 25A Replaceable Fuse

#### 5.3.2 Safety Precautions

# **A** DANGER

This accessory may cause shock or electrocution if used improperly. Treat inverter output the same as commercial ac power.

 This inverter will only operate from a 24V power source. Do not attempt to connect the inverter to any other power source, including any AC power source.

- Do not allow water or other liquids to contact the inverter.
- Do not use appliances with damaged or wet cords.
- Route appliance cords and extension cords to prevent accidental pinching, crushing, abrading, and tripping hazards.
- Do not use the inverter near flammable materials or in any locations that may accumulate flammable fumes or gases. This is an electrical device that can briefly spark when electrical connections are made or broken.


#### 5.3.3 Operation

- Set the inverter ON/OFF switch to the ON position at the ground control station.
- 2. Only plug in tools or appliances rated within the maximum output wattage at the platform AC receptacle mounted on the platform.

#### 5.4 ELECTRICIAN'S TREE

The Electrician's Tree provides a stable rack on which to hang spools of wire. Its design is ideal for pulling wire and reducing friction associated with ground-based wire spools.

**Note:** This accessory is rated for INDOOR USE only. INDOOR USE is use in areas shielded from wind so that there is no wind.

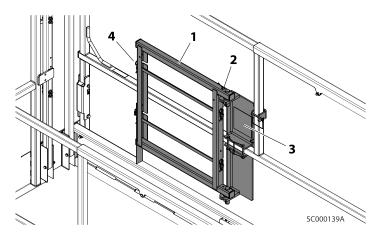

- 1. Electrician's Tree Assembly
- 3. Decal (Weight)

2. Release Pin

4. Hitch Pins

#### 5.4.1 Safety Precautions

# **A WARNING**

This accessory affects the overall platform capacity. Refer to the capacity decal On the accessory and adjust accordingly.

- Ensure no personnel are beneath the platform.
- Do not exit the platform over the rails, or stand on the rails
- · Do not pull wire by driving the machine.
- Only pull wire along the long axis of the machine with the rack in the working position.
- Ensure wire spools rotate freely.
- Return to the stowed position when not in use.


#### 5.4.2 Preparation and Inspection

- Ensure the rack is secured to the platform.
- Check for missing or damaged components. Replace if necessary.
- Check for loose nuts and bolts. If necessary, torque according to the Torque Chart specifications in Section 1 of the Service Manual.
- Replace any missing or illegible decals.
- · Ensure release pins are intact and function properly.

#### 5.4.3 Operation

- 1. Remove release pins and rotate the rack from the stowed position.
- 2. Pull the hitch pin for the spool rod to be loaded.
- 3. Load the spools onto the rod and replace the hitch pin.
- Swing the rack into working position and lock into place by replacing the release pin.
- 5. When not in use, remove spools and return the rack to the stowed position.

#### 5.5 FOOTSWITCH

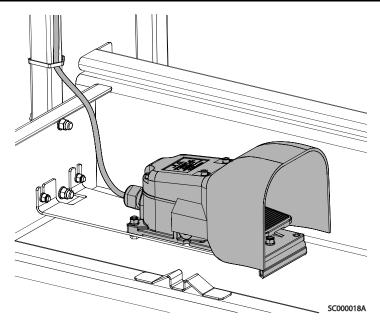

The footswitch serves as another enable switch in the function control circuit. It must be depressed in sequence with the platform control joystick trigger switch to enable operation of machine functions when using the platform controls. Power is removed from the platform controls when the footswitch is released.

**Note:** This accessory is only available for MOL70 specification machines.


#### 5.5.1 Operation

To operate a function, engage the footswitch and joystick trigger in any sequence before operating a function.

#### 5.6 HEAVY DUTY TOOL TRAY

This tool tray provides additional space for placement of tools and objects. Lift the tray up and over the platform billboard to rest on the rails. Return the tray to its stowed position when not in use.

**Note:** The tool tray has a maximum capacity of 50 lb (22 kg).

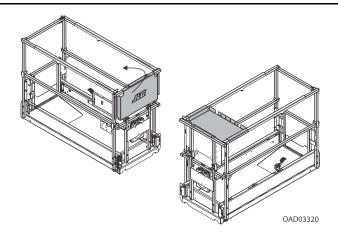

#### 5.7 MAGNETIC GATE LATCH

The Magnetic Gate Latch ensures the platform gate latches securely when closed.

#### 5.7.1 Operation

Grasp handle and swing gate open.

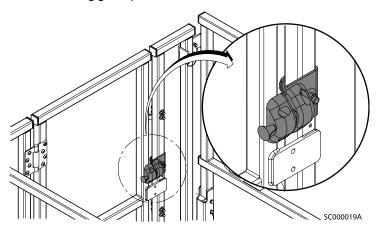



Figure 10. Magnetic Gate Latch Assembly

#### 5.8 PANEL CARRIER

The Panel Carrier can transport flat sheets or panels to an elevated site by positioning them in a channel on the outside of the platform. It consists of a carrier tray that runs parallel to the length of the platform and an adjustable bracket mounted to the handrail to hold material in place.

The panels can measure up to 4 ft x 8 ft (1.22 m x 2.4 m), or approximately 32 ft sq. (3 m sq.).

**Note:** This accessory is rated for INDOOR USE only. INDOOR USE is use in areas shielded from wind so that there is no wind.

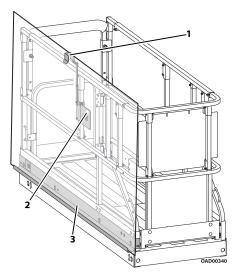

- 1. Adjustable Bracket
- 2. Capacity Decal (on back)
- Carrier Tray

#### 5.8.1 Safety Precautions

# **A WARNING**

Multiple material-handling accessories can be installed but only one may be loaded at a time unless approved by JLG Industries, Inc.

# **A** WARNING

This accessory affects the overall platform capacity. Refer to the capacity decal and adjust accordingly.

# **A WARNING**

When the carrier tray is loaded, the increase of area exposed to wind will decrease stability. Refer to the decal for maximum panel size and wind speed.

- Ensure no personnel are beneath the platform.
- Do not exit the platform over the rails, or stand on the rails.
- Remove the tray when not in use.

#### 5.8.2 Preparation and Inspection

- Ensure all components are secured to the platform.
- Check for any missing or damaged components. Replace if necessary.
- Check for loose nuts and bolts. If necessary, torque according to the Torque Chart specifications in the Service Manual.
- · Replace any missing or illegible decals.
- Replace any torn or frayed straps.


#### 5.8.3 Operation

- 1. Attach the carrier tray to the outside of the platform.
- 2. Load the Panel Carrier with material and secure with the adjustable bracket.
- 3. Position the panel to its desired location.
- 4. Remove the carrier tray when finished.

#### 5.9 PIPE RACKS

Pipe Racks store pipe or conduit inside the platform in order to prevent rail damage and optimize platform utility. The accessory consists of two racks attached to the lower platform handrail with adjustable straps that secure the load in place.

**Note:** This accessory is rated for INDOOR USE only. INDOOR USE is use in areas shielded from wind so that there is no wind.

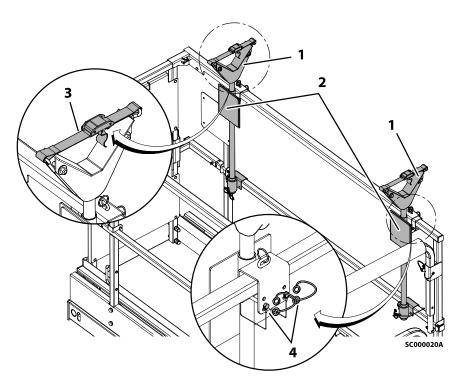

- 1. Pipe Racks (Working Position)
- 2. Capacity Decals

- 3. Tie-Down Strap
- 4. Locking Pins

#### 5.9.1 Safety Precautions

# **A WARNING**

This accessory affects overall platform capacity. Refer to capacity decals and adjust accordingly. Weight in racks plus weight in platform must not exceed rated capacity.

# NOTICE

Retract platform extension before attaching pipe racks and loading material.

# NOTICE

Maximum weight in racks is 45 kg (100 lb) evenly distributed between racks. Max length is 6 m (20 ft). Max circumference of material is 180 mm per pipe.

· Do not exit platform over rails or stand on rails.

- Do not drive the machine without material secured.
- Use this accessory on approved models only.
- Return racks to the stowed position when not in use.

#### 5.9.2 Preparation and Inspection

- Ensure both racks are mounted and securely fastened to inside of platform rails.
- · Check for missing or damaged components. Replace if necessary.


#### 5.9.3 Operation

- 1. To prepare racks for loading, remove locking pins, rotate each rack 90 degrees from stowed to working position, then secure with locking pins.
- 2. Place material onto racks with weight evenly distributed between both racks. Do not exceed the rated capacity stated on the decal.
- 3. Route the tie-down straps at each end across loaded material and tighten.
- To remove material, loosen and remove tie-down straps, then carefully remove material from racks.

**Note:** Reinstall tie-down straps across any remaining material before continuing machine operations.

5. When not in use, remove locking pins, rotate racks 90 degrees to the stowed position, then secure locking pins.

#### 5.10 PLATFORM EXTENSION HANDLES

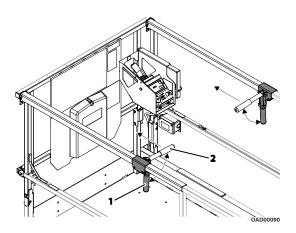


- 1. Extension Handle in the Stowed Position
- 2. Extension Handle in the Extension Position

The Platform Extension Handles are mounted to the top rails of the extension platform at the roller tabs. When rotated up  $90^{\circ}$ , the handles provide the operator an optional grip to push the extension platform out from its stowed position.

#### 5.10.1 Operation

- 1. Swing both extension handles up 90° to the extend position.
- While standing on the main platform, release the extension platform lock mechanism with one foot.
- 3. Grasp both handles and push platform extension out until locked in either of the two other locked extension positions.

#### 5.11 PLATFORM WORKLIGHTS

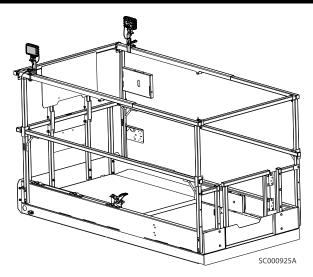

The Platform Worklights accessory consists of two 12V lights mounted to the platform railings.

#### 5.12 SKYSENSE®

#### 5.12.1 General Information

# **A** WARNING

SkySense is not intended to replace or reduce the need for the operator to be aware of the environment around the machine. Hazards that will cause serious injury or death may not be prevented or reduced by SkySense. The operator must always look in the direction of travel, avoid power lines, avoid obstacles that could strike the machine or persons in the platform, and follow all instructions on machine placards and in this manual.

The operator must not rely on SkySense as a substitute for following the instructions and warnings on machine placards and in this manual.

# NOTICE

Read and understand these instructions in their entirety before operating the machine.

# NOTICE

SkySense is intended to assist the operator. SkySense may not detect certain objects depending on shape, type of material, or orientation of the object to the sensors. It is the operator's responsibility to be aware of their surroundings at all times.

**Note:** SkySense is not active when operating the machine from the ground controls.

#### 5.12.2 Preparation and Inspection

Pre-Operation Inspection:

- 1. Inspect each of the SkySense tubes for dents, cracks, or other damage.
- 2. Inspect each SkySense sensor for any damage to the housing or sensor.

To test the SkySense system:

- Ensure there are no obstructions within 10 feet around or above the platform and the machine is on a smooth, firm surface within the limits of the maximum operating slope.
- 2. From the platform control console, lift and lower the platform.
- Place a hand or object above one of the sensors, then lift up the platform. Platform movement should stop, the LED indicator should be red, and the alarm should sound. If the alarm is muted, the mute button light should be red.
- 4. Release the joystick and enable switch.
- Place a hand or object above one of the sensors. Press the override button on the notification unit and lift the platform. The platform should lift, the LED indicator should be red, and the alarm should sound. If the alarm is muted, the mute button light should be red.
- 6. Remove hand or object from the sensor zone, then release the joystick and enable switch. Lower the platform to stowed.
- Lift the platform with no hand or object above the sensor. The platform should lift without interruption.
- 8. Lower the platform to stowed.

#### 5.12.3 Operation


SkySense slows a machine's function speed to creep speed when it is a certain distance away from an object, known as the "warning zone." If the machine continues to approach the object and moves into the "stop zone," SkySense stops all machine functions.

For proportional functions that are activated by the joystick, the size of the warning zone varies based on the amount of joystick activation. The stop zone always activates at the same distance from the object regardless of the joystick's position.

SkySense is active during the following functions:

- Lift Up
- Drive Forward
- Drive Reverse

#### 5.12.4 Notification Assembly

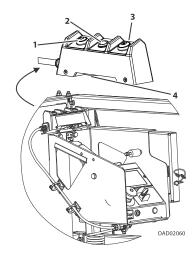

- 1. Override Button
- 2. Bi-color LED

- 3. Indicator Speaker OFF
- 4. Indicator Speaker (Underneath Unit)

#### 5.12.5 LED Indicator

A bi-color LED indicator on the platform control box signals Sky- Sense activity.

- · No LED: Normal operation.
- LED Flashing Yellow: Machine is in SkySense warning zone and will reduce to elevated drive height speed. Flash frequency correlates to closeness of the object.
- LED Red: Machine is in SkySense stop zone and all machine functions will cease.

LED Flashing Red: SkySense sensor is obstructed or damaged. Obstructions
must be removed and proper function verified. Damaged sensors must be
replaced.

#### 5.12.6 SkySense Alarm

Activation of SkySense is also signalled by an audible alarm that indicates SkySense activity when reaching the warning or stop zones.

In the warning zone, the audible alarm will pulse and increase in frequency as the machine moves closer to the object. In the stop zone, the alarm will sound a continuous tone.

Additionally, when the machine is in the stop zone, the platform control panel audible alarm will sound, indicating activation of the SoftTouch system. Reset the system by releasing the trigger switch.

Audible SkySense alarms can be muted, although LEDs will continue to light.

#### 5.12.7 Override Button

The yellow override button allows operators to bypass normal SkySense operation in order to move closer to an object within the stop zone.

When the operator overrides SkySense via the override button to get closer to a work surface, the machine will maintain creep speed and flash the appropriate indicator color based on location in either the warning or stop zones.


#### 5.12.8 SkySense Coverage Areas



Level One

**Note:** Sensor Cones shown are approximations for reference only.

#### 5.13 WORKSTATION

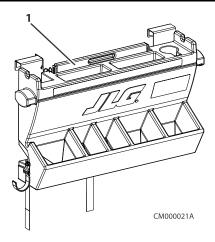

1. Adjustable Work Surface

The Workstation offers an adjustable work surface and additional space for storage of tools and objects.

**Note:** This accessory is rated for INDOOR USE only. INDOOR USE is use in areas shielded from wind so that there is no wind.

#### 5.13.1 Safety Precautions

# **A** WARNING

This accessory affects the platform capacity. Refer to the capacity decal and adjust accordingly. Do not overload the platform.

- Return the adjustable work surface to the stowed position when finished working.
- Do not drive the machine unless materials are properly secured or stored.

#### 5.13.2 Preparation and Inspection

- Ensure the Workstation is secured to the platform.
- · Check for missing or damaged components. Replace if necessary.
- Check for loose nuts and bolts. Torque to JLG Torque Chart Specifications if necessary.
- Replace any missing or illegible decals.

#### 5.13.3 Operation

To use the adjustable work surface, lift the handle and position across the Workstation.


# SECTION 6 Machine Specifications and Operator Maintenance

#### 6.1 GENERAL

This section of the manual provides additional necessary information to the operator for proper operation and maintenance of this machine.

The maintenance portion of this section is intended as information to assist the machine operator to perform daily maintenance tasks only and does not replace the more thorough Preventive Maintenance and Inspection Schedule included in the Service & Maintenance Manual.

#### 6.2 SERIAL NUMBER IDENTIFICATION

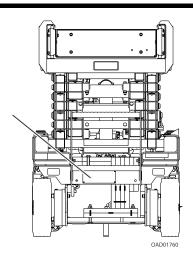

#### 6.3 MACHINE SPECIFICATIONS

#### 6.3.1 Operating Specifications

Description	ES1932i	ES1932 (ANSI, CSA, CE/ UKCA, GB, AUS)	ES1932 (MOL70)
PLATFORM			
Maximum Platform Height (Elevated) (Ground to Platform Floor)	19 ft (5.8 m)	19 ft (5.8 m)	19 ft (5.8 m)

Description	ES1932i	ES1932 (ANSI, CSA, CE/ UKCA, GB, AUS)	ES1932 (MOL70)
Lift Up Time			
No Load Rated Load	 22 - 29 seconds	 22 - 29 seconds	 22 - 29 seconds
Lift Down Time			
No Load Rated Load	 21 - 31 seconds	 21 - 31 seconds	 21 - 31 seconds
Electronic Arm Guards Pause Height (CE/UKCA & GB Only)	54 in	54 in	-
DRIVING			
Maximum Allowable Operating Slope (Platform Elevated)			
Front to Back	2.75°	3.75°	3.75°
Side to Side	2.75°	1.75° (indoor) 1.5° (outdoor)	1.5°
Side to Side (AUS Only)	_	1.5°	-
Maximum Stowed Travel Grade (Gradeability)	25% (14°)	25% (14°)	25% (14°)
Maximum Stowed Travel Grade (Side Slope)	8.75% (5°)	8.75% (5°)	8.75% (5°)
Maximum Drive Speed (FWD/REV) [Seconds to Drive 25 ft (7.62 m)]			
Stowed	5.6 - 7.9 seconds (3.0 mph [4.8 kph])	5.6 - 7.9 seconds (3.0 mph [4.8 kph])	5.6 - 7.9 seconds (3.0 mph [4.8 kph])
Elevated	32 - 36 seconds (0.5 mph [0.8 kph])	32 - 36 seconds (0.5 mph [0.8 kph])	32 - 36 seconds (0.5 mph [0.8 kph])
Turning Radius			
Inside (Curb to Curb) Outside	0 in (0 cm) 62.93 in (159.8 cm)	0 in (0 cm) 62.93 in (159.8 cm)	0 in (0 cm) 62.93 in (159.8 cm)
CHASSIS			
Approximate Gross Machine Weight	2,762 lb (1,253 kg)	3,450 lb (1,565 kg)	2,762 lb (1,253 kg)
Maximum Tire Load (per wheel)	1,365 lb (620 kg)	1,540 lb (699 kg)	1,365 lb (620 kg)

#### **Machine Specifications and Operator Maintenance**

Description	ES1932i	ES1932 (ANSI, CSA, CE/ UKCA, GB, AUS)	ES1932 (MOL70)
Ground Bearing Pressure	103 psi (7.24 kg/ cm²)	114 psi (8.01 kg/ cm²)	103 psi (7.24 kg/ cm²)
Ground Clearance			
PHP Retracted PHP Deployed	2.76 in (70 mm) 1 in (25 mm)	2.76 in (70 mm) 1 in (25 mm)	2.76 in (70 mm) 1 in (25 mm)
Breakover Angle (Grade)	11.3° (20%)	11.3° (20%)	11.3° (20%)
Maximum Hydraulic Pressure			
Main Relief Steer Relief Lift Relief	3000 psi (207 bar) 800 psi (55 bar) 2540 psi (175 bar)	3000 psi (207 bar) 800 psi (55 bar) 2540 psi (175 bar)	3000 psi (207 bar) 800 psi (55 bar) 2540 psi (175 bar)
Ambient (Operating) Temperature	Refer to Figure	— Hydraulic Oil Operat	ing Temperature

# Platform Capacities

MAXIMUM MAX. C WARKET PLATFORM LOWE CAPACITY (1) FORM	SAPA ED OF EXT	MAX. CAPACITY AL- LOWED ON PLAT- FORM EXTENSION	MAX. PERSONS AL- LOWED IN PLATFORM <sup>(2)</sup>	MAX. SIDE FORCE (Platform Fully Extended @ Max. Capacity) <sup>(2)</sup>	MAX. OPERAT- ING WIND SPEED
All Markets <sup>(3)</sup> 507 lb (230 kg) 265	lb (1;	265 lb (120 kg)	1 Person	45 lb (200 N)	(s/w 0) ydw 0
All Markets (Ex- cept MOL70) 507 lb (230 kg) 265 ll	0 (1;	265 lb (120 kg)	Outdoor - 1 Person Indoor - 2 Persons	Outdoor - 45 lb (200 N) Indoor- 90 lb (400 N)	28 mph (12.5 m/ s) 0 mph (0 m/s)
MOL70 507 Ib (230 kg) 265 Ib	Ξ,	265 lb (120 kg)	2 Persons	100 lb (445 N)	28 mph (12.5 m/ s)

Note (1) Maximum Platform Capacity includes platform and platform extension.

Note (2) INDOOR USE is use of a MEWP in areas shielded from wind so that there is no wind. OUTDOOR USE is use of a MEWP in an environment that can be exposed to wind.

Note (3) ES1932i is not available in AUS market.

#### 6.3.3 Machine Dimensions

Description	ES1932i, ES1932
Platform Height - Elevated (Ground to Platform Floor)	19 ft (5.8 m)
Platform Height - Stowed (Ground to Platform Floor)	38.7 in (98.3 cm)
Rail Height (Platform Floor to Top of Rail)	39.57 in (100.5 cm) - Fixed Rails 43.88 in (111.5 cm) - Folding Rails 44.3 in (112.5 cm) - Dual Rails 44.4 in - Quick-Fold Rails
Overall Height (Ground to Top Rail)	82.8 in (210.3 cm) - Folding/Dual Rails 78.4 in (199.2 cm) - Fixed Rails 82.8 in (210.3 cm) - Folding/Dual Rails 83.1 in - Quick-Fold Rails
Overall Height (Rails Folded)	78.4 in (199.2 cm) - Fixed Rails 64.27 in (163.2 cm) - Folding Rails 69.4 in (176.3 cm) - Dual Rails 78.2 in - Quick-Fold Rails
Overall Machine Width	32 in (81.3 cm)
Overall Machine Length	68.7 in (174.5 cm)
Extension Deck Length	33.7 in (85.6 cm) - Fixed/Folding Rails 34.2 in (87 cm) - Dual Rails
Wheelbase	53 in (135 cm)

#### 6.3.4 Tires

Description	ES1932i, ES1932
Size	12.72 in x 3.9 in (32.3 cm x 10.0 cm)
Wheel Bolt Torque	120 ft. lb. (163 Nm)

#### 6.3.5 Batteries

Description	Lead Acid	AGM
Voltage (24V System - Series)	6V per battery	
Amp Hour Rating	225 Amp Hour @20 hr Rate	213 Amp Hour @20 hr Rate
Reserve Capacity	447 Minutes	492 Minutes
Weight	63 lb (28.6 Kg) (US Battery) 62 lb (28.12 kg) (Trojan)	66 lb (30 kg)

#### 6.4 LUBRICATION

#### 6.4.1 Lubrication Specifications

KEY	SPECIFICATIONS
MPG	Multipurpose Grease having a minimum dripping point of 350° F. Excellent water resistance and adhesive qualities, and being of extreme pressure type. (Timken OK40 pounds minimum.)
EPGL	Extreme Pressure Gear Lube (oil) meeting API service classification GL-5 or MIL-Spec MIL-L-2105.
НО	JLG Recommends - Mobil - Mobilfluid 424 Mobil EAL ENVIRONSYN H 32 Mobil SHC HYDRAULIC EAL 32 EAL and SHC are compatible with each other.

#### 6.4.2 Hydraulic Oil

HYDRAULIC SYSTEM OPERATING TEMPERATURE RANGE	SAE VISCOSITY GRADE
0° F to +23° F (-18° C to -5° C)	10W
0° F to 210° F (-18° C to + 99° C)	10W-20, 10W-30
50° F to 210° F (+10° C to +99° C)	20W-20

**Note:** Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities.

#### 6.4.3 Lubrication Capacities

COMPONENT	ES1932i, ES1932
Hydraulic Reservoir (at Full mark)	1.003 gal (3.8 L)
Hydraulic System (Including Reservoir)	1.85 gal (7 L)

#### 6.4.4 Hydraulic Oil Specifications

SPECIFICATION	MOBIL MOBILFLUID 424	MOBIL EAL ENVIRONSYN H 32
ISO Viscosity Grade	10W-30	#32
Spec Gravity API	29.0	0.950
Pour Point, Max	-65° F (-54° C)	-38° F (-39° C)
Flash Point, Min.	442° F (228° C)	514° F (268° C)

SPECIFICATION	MOBIL MOBILFLUID 424	MOBIL EAL ENVIRONSYN H 32
VISCOSITY SPECIFICATIONS	3	
at 40° C	55 cSt	33.1 cSt
at 100° C	9.3 cSt	6.36 cSt
at 100° F	80 SUS	_
at 210° F	43 SUS	_
cp at -18°C	2700	_
Viscosity Index	152	147
Operating Temp	_	-20° F (-29° C) to 200° F (93° C)

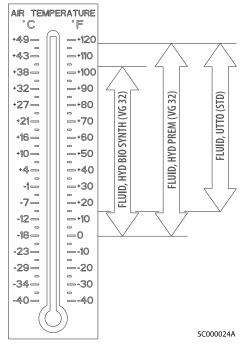


Figure 11. Hydraulic Oil Operating Temperature

**Note:** Machine operation using non-JLG approved hydraulic fluids or operation outside of the temperature boundaries outlined in the Hydraulic Fluid Operation Chart may result in premature wear or damage to components of the hydraulic system.

Some fluids may not be available from the factory.

#### 6.5 HYDRAULIC OIL CHECK PROCEDURE


Check the hydraulic oil daily to ensure proper operation of the machine.

Check the hydraulic oil level only when the machine is in the stowed position. Ensure the hydraulic oil has warmed to operating temperature before checking the reservoir.

- 1. Open the hydraulic compartment door and locate the hydraulic reservoir (1).
- 2. Locate the lines indicating the maximum and minimum levels of hydraulic oil (2 & 3) in the reservoir. Ensure the level of oil is between the two lines.
- 3. If the level of oil in the reservoir is below the minimum level (2), more oil is needed. Wipe all dirt and debris from the filler cap (4) and surrounding area.
- Remove filler cap and add proper grade of oil. Fill until oil level is close to the maximum level. Do not overfill.

**Note:** Take precautions so impurities (dirt, water, etc.) cannot enter the hydraulic system while filter/filter cap is removed.

Note: Recommended lubricating intervals are based on machine operations under normal conditions. For machines used in multi-shift operations and/or exposed to hostile environments or conditions, lubrication frequencies must be increased accordingly.

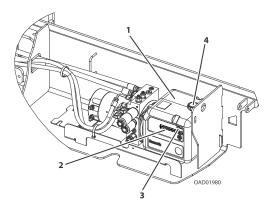

#### 6.6 SCISSOR ARM — SAFETY PROP

# WARNING

Never work under an elevated platform until it has been restrained from movement with the safety prop, blocking or overhead sling.

# **A** CAUTION

The safety prop must be used whenever maintenance performed on the machine requires the scissor arms to be raised and only with no load in the platform


The safety prop is located on the side of the scissor arms on the right side of the machine.

#### To engage the safety prop:

- 1. From the Ground Control Station, raise the platform far enough to allow the safety prop to be engaged.
- Rotate the prop assembly clockwise until it hangs vertically on the side of the scissor arms.
- Lower the platform until the prop rests against the prop stop on the arm set below it, stopping all downward movement of the platform/scissor arm assembly.
- Turn off machine power by pressing the emergency stop switch at the Ground Control Station.

#### To disengage the safety prop:

- 1. Pull out the emergency stop switch at the ground and raise the platform enough to release the prop off the prop stop.
- Rotate the prop assembly counterclockwise until it is resting on the arm prop holder plate on the side of the scissor arm assembly.

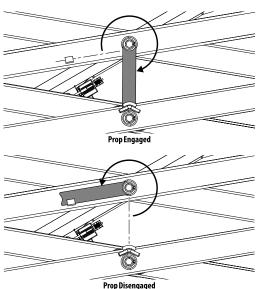

#### 6.7 BATTERY MAINTENANCE AND CHARGING

#### 6.7.1 Battery Maintenance and Safety Practices

**Note:** These instructions are for unsealed (wet) batteries only.

If machine is equipped with sealed batteries, no maintenance other than cleaning corroded battery terminals is required.

# **A** CAUTION


Ensure that battery acid does not come into contact with skin or clothing. Wear protective clothing and eyewear when working with batteries. Neutralize any battery acid spills with baking soda and water.

Battery acid releases an explosive gas while charging, allow no open flames, sparks or lighted tobacco products in the area while charging batteries. Charge batteries only in a well ventilated area.


Add only distilled water to batteries. When adding distilled water to the batteries, a non-metallic container and/or funnel must be used.

Check the electrolyte level of the batteries often, adding only distilled water when required. When fully charged, battery fluid level should be 1/8" below vent tubes.

- DO NOT fill to bottom of vent tubes.
- DO NOT allow fluid level to go below the top of the plates when charging or operating.

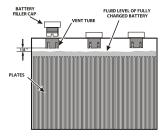

#### 6.7.2 Delta-Q - Battery Charger

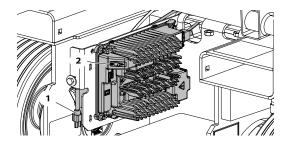


1. AC Voltage Input Plug

2. Charge Indicator LEDs

**Note:** Rear cross member and ladder shown removed for illustration purposes only.

- AC Power On BLUE LED ON
- Low State of Charge (Bottom Panel GREEN LED Flashing) (Top Panel GREEN LED OFF)
- High State of Charge (Bottom Panel GREEN LED ON) (Top Panel GREEN LED Flashing)
- Charge Complete (Bottom Panel GREEN LED ON) (Top Panel GREEN LED ON)
- Fault Indicator (RED LED ON)
- External Error Condition Caution (AMBER LED Flashing)

#### 6.7.3 Green Power - Battery Charger (China Only)

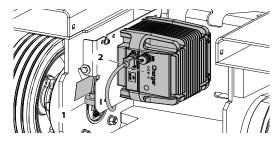

1. AC Voltage Input Cable


2. Charge Indicator LEDs

Note: Rear crossmember and ladder shown removed for illustration purposes only.

- Battery Charging (YELLOW LED AGM Flashes Quickly /FLOODED -Remains ON/ AGM-FLOODED - Flashes Slowly)
- Charge Complete (GREEN LED ON)

- Fault Indicator (RED LED ON)
- Performing Self-Diagnostic (YELLOW and GREEN LEDs Flashing Simultaneously)

#### 6.7.4 Eagle Performance - Battery Charger

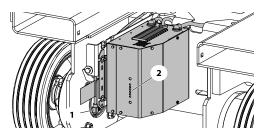

AC Voltage Input Cable

2. Charge Indicator LEDs

Note: Rear crossmember and ladder shown removed for illustration purposes only.

- Battery Type Indicator (YELLOW LED ON)
- Battery Charging (30%-60%-90% RED LED ON)
- Charge Complete (GREEN LED ON)
- No Battery Detected (30% RED Blinking)
- Overall Timer Shutdown (30-60-90% RED LEDs Blinking)
- Internal OverTemp Shutdown (30 90% RED LEDs Blinking)

#### 6.8 BATTERY QUICK-DISCONNECT

Machines equipped with the battery quick disconnect allow all machine power to be easily disconnected at the battery without removing battery cables from the battery posts. To disconnect power, locate the RED quick-disconnect connector on top of the batteries inside the battery compartment and pull halves apart.



#### 6.9 TIRES AND WHEELS

#### 6.9.1 Tire Wear and Damage

The tire and rim assemblies installed on machines have been approved by the tire manufacturer for applications in which those products are intended to be used. The tire and rims installed on each product model have been designed for stability requirements, which consist of track width, tire compound, and load capacity. Tire changes such as rim width, centerpiece location, larger or smaller diameter, tire compound, etc., without written manufacturers approval, could result in an unsafe condition regarding stability.

The tires and rims installed on machines are to be inspected daily as part of the daily walk-around inspection. JLG requires that the daily walk-around inspection be performed at each operator change during a shift and at each shift change.

#### 6.9.2 Wheel and Tire Replacement

JLG recommends that any replacement tire be the same size and brand as originally installed on the machine or offered by JLG as an approved replacement. Please refer to the JLG Parts Manual for the part number of the approved tires for a particular machine model.

If any of the following is discovered during tire inspection, measures must be taken to remove the JLG product from service immediately. Arrangements must be made for replacement of the tire(s) or tire assembly(s). Both tires/wheels on the same axle must be replaced:

- If the overall diameter of the tire is less than one of the following: 100 x 323 Tire 12.25 in. (311mm) minimum
- · If any uneven wear is discovered.

A tire with significant damage in the tread area or sidewall requires immediate evaluation before placing the machine into service. If a cut, tear, chunk, or other discrepancy exceeds any one or more of the following dimensions, the tire must be replaced:

3.0 in. (76 mm) long

0.75 in. (19 mm) wide

0.75 in. (19 mm) deep

- If the metal wheel is visible at any point through the tread area of the tire.
- If more than one discrepancy exists in any quadrant of the wheel (within 90 degrees of one another).

#### 6.9.3 Wheel Installation

It is extremely important to apply and maintain proper wheel mounting torque.

# **A WARNING**

Wheel bolts must be installed and maintained at the proper torque to prevent loose wheels, a broken bolt, and possible separation of wheel from the axle.

Tighten the wheel bolts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten the bolts. The proper procedure for attaching wheels is as follows:

Tighten the mounting bolts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten.


- 1. Install wheel (1) onto hub (2).
- 2. Start mounting bolts (3) by hand to prevent cross threading. DO NOT use a lubricant on threads.
- 3. Tighten bolts in the following sequence:



4. Tighten bolts in stages. Following the recommended sequence, tighten each bolt per wheel torque of 163 Nm (120 ft.lb.).

	TORQUE SEQUENCE	
1st Stage	2nd Stage	3rd Stage
20-30 ft lbs (28 - 42 Nm)	65-80 ft lbs (91 - 112 Nm)	105 -120 ft lbs (142 - 163 Nm)

Wheel mounting bolts should be torqued after the first 50 hours of operation and after each wheel removal. Check torque every 3 months or 150 hours of operation.

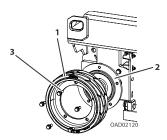

1. Wheel and Tire Assembly

2. Wheel Bolts (5)

3. Hub

#### 6.10 DIAGNOSTIC TROUBLE CODES (DTC)

# NOTICE

The DTC codes listed in the following table are not a complete listing of machine DTC codes. This listing shows only those DTC's which an operator may be able to correct due to operating error.

The DTC table following is sorted in groups by the first two digits, these digits represent the number of flashes the system distress indicator lamp will flash on the platform indicator panel when a fault occurs.

The more detailed three to five digit code numbers in the DTC column of the following tables are only indicated on a JLG handheld diagnostic analyzer connected to the machine, or on the Ground Control Station - MDI indicator, if equipped.

To troubleshoot multiple DTC's, start with the DTC with the higher first two digits.

If a correction is made during a check, conclude the check by cycling the machine power off then back on, using the emergency stop switch.

### NOTICE

Should a fault occur which cannot be corrected by the operator, the problem must be referred to a mechanic qualified to repair this model of JLG lift.

DTC	Help Message	Alarm	Flash Code	Action	Trigger
800	FUNCTIONS LOCKED OUT -	None	Anone	Safe Mode Li	A period of time elapsed without activity and the Control System entered a low-power state to preserve battery charge (2 hours). Cycle the Ground EMS in Ground Mode or the Platform EMS in Platform Mode to re-enable the vehicle.
	SYSTEM POWERED DOWN	2		Down State = PREVENTED	<ul> <li>Two hours without Drive Forward, Drive Reverse, Lift Up, Lift Down, Steer Left, or Steer Right.</li> </ul>
					Timer resets if user changes Platform Mode / Ground Mode
600	DRIVE PREVENTED – ELE- VATED ABOVE DRIVE CUT- OUT HEIGHT	None	None	• DriveState = PREVENTED	The Drive Cutout functionality is enabled, and the Platform is Elevated above the Calibrated Cutout Height.
211	POWER CYCLE	None	2_1	No Motion restrictions	This Help Message is issued at each power-up. This serves to indicate which messages have been recorded in the failure log since the last power-up event.
212	KEYSWITCH FAULTY	None	2_1	Force to GroundMode	Both the Ground Select and Platform Select signals are energized, which means there is an issue with the keyswitch or one of the lines are shorted to battery.
221	FUNCTION PROBLEM – HORN PERMANENTLY SELECTED	None	2_2	Horn Prevented	Horn Switch in the Platform Control Box was closed during power- up. Release or repair the switch to clear the message.

DTC	Help Message	Alarm	Flash Code	Action	Trigger
2232				MoveState = LIFT	
	INCTION PROBLEM -			DriveState = PREVENTED	In PlatformMode, the Drive - Lift Selector Switch indicates
	DRIVE & LIFT BOTH OPEN	None	2_2	LiftUpState = PREVENTED	that neither function is selected. Repair the wiring or switch to clear the message.
				LiftDownState = PREVENTED	
224	FUNCTION PROBLEM – STEER LEFT PERMANENTLY SELECTED	None	2_2	• DriveState = PREVENTED	Steer Left Switch in the Platform Control Box was closed during power-up. Release or repair the switch to clear the message.
225	FUNCTION PROBLEM – STEER RIGHT PERMA- NENTLY SELECTED	None	2_2	• DriveState = PREVENTED	Steer Right Switch in the Platform Control Box was closed during power-up. Release or repair the switch to clear the message.
228				• DriveState = PREVENTED	
	FUNCTION LOCKED OUT – ACCELERATOR NOT CENTERED	None	2_2	LiftUpState = PREVENTED	<ul> <li>Selected function (Drive or Lift) is not allowed because the joystick (accelerator) was not centered at power-up. Return joystick to center momentarily.</li> </ul>
				LiftDownState = PREVENTED	
229	FUNCTION PROBLEM – TRIGGER PERMANENTLY CLOSED	None	2_2	DriveState = PREVENTED LiftUpState = PREVENTED LiftDownState = PREVENTED	<ul> <li>Trigger Switch in the Platform Control Box was closed at power-up. Release switch or repair the switch / wining to clear the difficulty.</li> </ul>

DTC	Help Message	Alarm	Flash Code	Action	Trigger
231				In GroundMode then	
	FUNCTION PROBLEM - LIFT PERMANENT! Y SEI FOTED	None	2_3	LiftUpState     PREVENTED	Lift Switch (Up or Down) in the Ground Control Box was closed during power-up. Release or repair the switch to clear
				LiftDownState     PREVENTED	the message.
232					
	GROUND LIFT UP/DOWN AC-	None	2_3	<ul> <li>tnen Littupstate = PREVENTED</li> </ul>	<ul> <li>In GroundMode, the control system has detected the Lift Up and Down are active simultaneously. Check the Lift Switch</li> </ul>
				LiftDownState     PREVENTED	and associated wiring in the Ground Control Box.
242	AMBIENT TEMPERATURE SENSOR – OUT OF RANGE HIGH	PF: Continuous	2_4	• Drive and Lift Restrictions	<ul> <li>The temperature as communicated by the temperature/filt sensor is greater than 185° F (85° C).</li> </ul>
253	DRIVE PREVENTED – CHARGER CONNECTED	None	2_5	• DriveState = PREVENTED	Driving is not possible since the vehicle is charging.
254	DRIVE & LIFT UP PRE-	aco N	2.5	• DriveState = PREVENTED	<ul> <li>Driving and Lifting are not possible since the vehicle is</li> </ul>
	CONNECTED			• LiftUpState PREVENTED	charging and it is configured to prevent all motion.

DTC	Help Message	Alarm	Flash Code	Action	Trigger
255	PLATFORM OVERLOADED	PF: 5000ms ON/200ms OFF GND: 5000msON/ 2000ms OFF	2_5	• DriveState = PRE- STATE = FALSE} • DriveState = CREEP if {MACHINE SETUP — > MARKET = JAPAN} AND {TRANSPORT STATE = TRUE}  • LiftUpState = PRE- VENTED if {(Platform- Mode = TRUE) OR (GroundMode = TRUE) OR (GroundMode = TRUE)  — > LOAD = CUTOUT ALL)  • LiftDownState = PRE- VENTED if {(Platform- Mode = TRUE) OR (GroundMode = TRUE)  — > LOAD = CUTOUT ALL)  • LiftDownState = PRE- VENTED if {(MACHINE SETUP — > LOAD = CUTOUT ALL)}  • LiftDownState = PRE- VENTED if {(MACHINE SETUP — > LOAD = CUTOUT ALL)}  • LOAD = CUTOUT ALL)  ALL)  • LOAD = CUTOUT ALL)  GOOD = CUTOUT ALL)  — > LOAD = CUTOUT ALL)  ALL)  • LOAD = CUTOUT ALL)  GOOD = CHOUTOUT ALL)  ALL)  • MARKET = GB) OR (MACHINE SETUP — > MARKET = GB) OR (MACHINE SETUP — > MARKET = KOREA)	Triggers when OverloadState = TRUE  Clears when OverloadState = FALSE  While the Load Sensing System is enabled, the Platform Load measured by the Load Sensing System is excessive. Lift Up is Prevented, as well as drive above transport height. For the GB and KOREA markets, lift down is also prevented above a certain height. For the Japanese Market, Drive is limited to CREEP speeds in transport.  Refer to LSS functionality for Lift and Drive restrictions.  This fault shall be suppressed if technician navigates to the CALIBRATIONS menu of the ANALYZER.

DTC	Help Message	Alarm	Flash Code	Action	Trigger
256	DRIVE PREVENTED – POT- HOLE NOT ENGAGED	PF: 500ms On/500ms Off GND: 500ms On/500ms Off	2_5	• DriveState = PREVENTED	While elevated, driving is not possible since the control system detected that the pot-hole protection mechanism failed to deploy. Clear the obstacle blocking the pot-hole protection mechanism, repair the mechanical problem, re-adjust the pot-hole limit switches, or repair the wining to correct the problem.      Alternately, there may be difficulty with the Elevation Angle Sensor that causes the Control System to improperly believe the platform is elevated.
2568	TEMPERATURE CUTOUT AC- TIVE - AMBIENT TEMPERA- TURE TOO LOW	If Transport Mode= TRUE PF: Continuous If Transport Mode= FALSE PF: OFF	2_5	Drive and Lift Restrictions	The temperature as communicated by the temperature sensor located on the temperature/filt sensor is less than or equal to {PERSONALITIES->TEMP CUTOUT->CUTOUT SET}  (See Low Temperature Cutout Functionality)  This DTC shall not be displayed in GroundMode, and no restrictions shall be implemented.
421	POWER MODULE TOO HOT - PLEASE WAIT	None	4_2	DriveState =     PREVENTED     LiftUpState =     PREVENTED	<ul> <li>Heatsink temperature above 203°F (95° C).</li> <li>Possible Cause:</li> <li>Controller is operating in an extreme environment.</li> <li>Excessive load on vehicle.</li> <li>Improper mounting of controller</li> </ul>

DTC	Help Message	Alarm	Flash Code	Action	Trigger
4235					Heatsink temperature exceeded 185° F (85° C).
					• Effect: Reduced drive and brake torque.
					Possible Cause:
	POWER MODULE TOO HOT - REDUCED OPERATION	None	4_2	• Drivestate = CREEP	Controller is performance-limited at this temperature.
				• LiliOpsidie - Oreer	Controller is operating in an extreme environment.
					Excessive load on vehicle
					Improper mounting of controller.
4236				• DriveState =	<ul> <li>Heatsink temperature below -40° F(-40°C).</li> </ul>
	POWER MODULE TOO COLD - MODULE SHUT- DOWN	None	4_2		Possible Cause:
				• LITUPSTATE PREVENTED	Controller is operating in an extreme environment.
426	MASTER MODULE TEMPER- ATURE – OUT OF RANGE	None	4_2	Normal operation	• The Ground Module's internal temperature sensor is out of range. (<104° F (40° C) or > 302° F (150° C)
441	BATTERY VOLTAGE TOO LOW – SYSTEM SHUTDOWN	None	4_4	SafeMode     LiftDownState =     PREVENTED	<ul> <li>Battery Voltage (VBAT) momentarily dropped below 14.5V when using flooded lead-adid batteries, or 16.0V when using AGM batteries. With a low battery charge, this can occur during heavy current demand due to Drive, Steer, or Lift Up. Recharge batteries or check for damaged batteries, sulfated batteries, or poor power connections.</li> </ul>

DTC	Help Message	Alarm	Flash Code	Action	Trigger
442	BATTERY VOLTAGE TOO HIGH – SYSTEM SHUTDOWN	None	4_4	Enter SafeMode     LiftDownState = MAX	The Ground Module measured excessively high battery voltage (VBAT) (>32.0V) and de-energized the Main Line Contactor and Battery Relay to protect system devices and was unable to bring voltage down to normal operating range. This may be due to improper battery charging or incorrect voltage batteries being used.
4421	LOGIC SUPPLY VOLTAGE OUT OF RANGE HIGH	None	4_4	Enter SafeMode     LiftDownState = MAX	The Ground Module's VSW voltage was measured to be more than 32V. This may be caused by loose battery termi- nal, severely discharged batteries, a damaged battery, or an improper wire harness connection.
4424	POWER MODULE VOLTAGE TOO LOW - MODULE SHUTDOWN	None	4_4	• DriveState = PREVENTED • LiftUpState = PREVENTED	Severe B + Under voltage Set: Capacitor bank voltage dropped below Severe Under voltage limit with FET bridge enabled.  Ffect: Reduced Drive Torque Possible Cause:  Battery menu parameters are misadjusted  Non-controller system drain on battery  Battery resistance too high  Battery disconnected while driving  Blown B+ fuse or main contactor not closed

DTC	Help Message	Alarm	Flash Code	Action	Trigger
4475					Pump BDI Fault Set: BDI Percentage charge at 0% when the pump was activated.
	POWER MODIII F - BDI			DriveState = PREVENTED	• Effect: ShutdownPump
	FAULT	None	4_4	LiftUpState = =	Possible Cause:
				PREVENTED	Battery is fully discharged
					BDI parameters are mistuned
4476	BATTERY VOLTAGE TOO HIGH – UNPLUG CHARGER	None	4_4	Enter SafeMode     LiftDownState = MAX	<ul> <li>The Ground Module momentarily measured excessively high battery voltage (VBAT) (&gt;32.0V) and entered SafeMode to protect system devices. This may be due to improper bat- tery charging or incorrect voltage batteries being used.</li> </ul>
4477	BATTERY VOLTAGE TOO HIGH – FORCING DISCHARGE	None	4_4	Lift Down = PREVENTED Lift Up = PREVENTED Drive = PREVENTED	• The Ground Module momentarily measured excessively high battery voltage (VBAT) (>32.0V) and entered SafelMode. This may be due to improper battery charging or incorrect voltage batteries being used.

# 6.11 RADIO FREQUENCY (RF) INFORMATION

Note: The ClearSky Smart Fleet™ CS550 connectivity module antenna is internal to the assembly. The CS550 connectivity module complies with the wireless certification regulations in the regions of sale. Machines equipped with Clear-Sky Smart Fleet telematics must be received by countries that are certified to have ClearSky Smart Fleet. For a full listing of ClearSky Smart Fleet certified countries, please refer to the ClearSky webpage on the JLG website.

### 6.11.1 Federal Communications Commission (FCC)

### **FCC Interference Statement**

ClearSky CS550 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

# Notice Regarding Radio Frequency Radiation Exposure

ClearSky CS550 complies with the FCC radio frequency exposure limits prescribed for mobile use (i.e,. antennas are greater than 20 cm from a person's body) in an uncontrolled environment. Consequently, a person within 20 cm (8 in) of a CS550 that is connected to machine battery power could expose that person to RF energy in excess of what has been established by the FCC RF exposure guidelines.

# 6.11.2 Innovation, Science and Economic Development (ISED)

# Radio Frequency Interference Requirements

The ClearSky CS550 Class B digital apparatus complies with Canadian ICES-003. [Canada Compliance Label: CAN ICES-3 (B)/NMB-3(B)]

This device complies with Industry Canada license-exempt RSS standard (s). Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### Notice Regarding Radio Frequency Radiation Exposure

ClearSky CS550 complies with the ISED radio frequency exposure limits prescribed for mobile use (i.e,. antennas are greater than 20 cm from a person's body) in an uncontrolled environment. Consequently, a person within 20 cm (8 inches) of a CS550 that is connected to machine battery power could expose that person to RF energy in excess of what has been established by the ISED RF exposure guidelines.

## 6.11.3 European Union Conformity (CE)

### CE Interference Statement

JLG Industries, Inc. declares that the radio equipment ClearSky Smart Fleet CS550 Connectivity Module complies with Directive 2014/53/EU. Full details can be found on the declaration of conformity. The CS550 is intended to be mounted on JLG machines and has integrated beacon functionality. Additionally, it provides telematics data via WiFi or Cell, and provides local diagnostic data exchange with a mobile device connected via WiFi and BLE. Mobile device software is obtained through Google Play Store or Apple App Store.

Frequencies of Operation [and maximum power output]:

- LTE Cat M1: 700/750/800/850/900/1700/1800/1900/2100 MHz [23 dBm±2 dB]
- 2G GPRS: 900MHz [Class 4, 33 dBm ±3 dB], 1800MHz [Class 1, 30 dBm ±3 dB]
- 2G EGPRS: 900MHz [Class E2, 27 dBm ±3 dB], 1800MHz [Class E2, 26 dBm ±3 dB]
- WiFi (IEEE 802.11b/g/n): 2400-2483.5 MHz [18 dBm e.i.r.p]
- Bluetooth (BLE, Mesh 1.0 and proprietary GATT): 2400-2483.5 MHz [12.1 dBm e.i.r.p]
- GNSS (receive only: GPS, GLONASS, BeiDou, Galileo): 1575.42MHz, 1561.098MHz, 1602MHz

Ensure at least 20 cm separation distance is maintained between user's body and CS550 module to meet Maximum Permissible Exposure (MPE) restrictions for RF exposure.

Contact: JLG EMEA B.V., Polaris Avenue 63, 2132 JH Hoofddorp, Netherlands

# 6.12 SUPPLEMENTAL INFORMATION ONLY APPLICABLE TO CE/UKCA MACHINES (EN280-1:2022)

The following information is provided in accordance with the requirements of the European Machinery Directive 2006/42/EC or Supply of Machinery (Safety) Regulations 2008 No. 1597.

The A-Weighted emission sound pressure level at the specified workstation based on test methods per EN280-1:2022 Annex M.1 does not exceed 70 dB (A).

The vibration highest root mean square value of weighted acceleration to which the whole body is subjected during driving or lifting does not exceed 0.5 m/s².

JLG declares that machines included in this manual, before placing on the market, have been subjected to the required tests in accordance with EN280-1:2022, clause 5.3.

**Note:** EC/UKCA Declarations of Conformity may vary. Refer to the original serial number-specific declaration for your machine to determine which is applicable.

# 6.13 EC DECLARATION OF CONFORMITY

Manufacturer

JLG Industries, Inc.

Address

1 JLG Drive

McConnellsburg, PA 17233 USA

**Technical File** 

JLG EMEA B.V.

Polaris avenue 63,

2132 JH Hoofddorp

The Netherlands

Contact/Position

Senior Manager — Product Strategy EMEAI

Date/Place

Hoofddorp, Netherlands

Machine Type

Mobile Elevating Work Platform

Model Type

ES1932i, ES1932

**EC-Number** 

2842

**Certificate Number** 

KCEC5406

**Notified Body** 

Kuiper Certificering b.v.

Address

Van Slingelandtstsraat 75, 7331 NM Apeldoorn, The Netherlands

### Reference Standards

- EN 55011:2016+A11:2020
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280-1:2022
- FN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- · 2006/42/EC Machinery Directive
- 2014/30/EU EMC Directive
- 2014/53/EU RED Directive (If fitted with optional equipment)

**Note:** This declaration conforms with the requirements of annex II-A of the council directive 2006/42/EC. Any modification of the above described machine violates the validity of this declaration.

## 6.14 UKCA DECLARATION OF CONFORMITY

Manufacturer

JLG Industries, Inc.

Address

1 JLG Drive McConnellsburg, PA 17233 USA

Technical File

JLG Industries UK Ltd Braunstone Frith Industrial Estate Unit 3 Sunningdale Road Leicester, LE3 1UX United Kingdom

Contact/Position

Director of Engineering — Europe

Date/Place

Leicester, United Kingdom

Machine Type

Mobile Elevating Work Platform

Model Type

ES1932i, ES1932

AB-Number

0463

**Certificate Number** 

AVUK5406

Approved Body

Amtri Veritas

Address

Pierce Street, Macclesfield, SK11 6ER, England

### Reference Standards

- EN 55011:2016+A11:2020
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280-1:2022
- EN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2008 No. 1597 Supply of Machinery (Safety) Regulations 2008
- 2016 No. 1091 Electromagnetic Compatibility Regulations 20165
- 2017 No. 1206 Radio Equipment Regulations 2017 (if fitted with optional equipment)

**Note:** This declaration conforms with the requirements of annex II-A of the Regulations 2008 No. 1597. Any modification of the above described machine violates the validity of this declaration.

# 6.15 SUPPLEMENTAL INFORMATION ONLY APPLICABLE TO CE/UKCA MACHINES (EN280:2013+ A1:2015)

The following information is provided in accordance with the requirements of the European Machinery Directive 2006/42/EC or Supply of Machinery (Safety) Regulations 2008 No. 1597.

The A-Weighted emission sound pressure level at the work platform is less than 70 dB(A).

The vibration total value to which the hand-arm system is subjected does not exceed 2,5 m/s2. The highest root mean square value of weighted acceleration to which the whole body is subjected does not exceed 0,5 m/s2.

**Note:** EC/UKCA Declarations of Conformity may vary. Refer to the original serial number-specific declaration for your machine to determine which is applicable.

## 6.16 EC DECLARATION OF CONFORMITY

Manufacturer

JLG Industries, Inc.

Address

1 JLG Drive

McConnellsburg, PA 17233 USA

Technical File

JI G FMFA B.V.

Polaris avenue 63,

2132 JH Hoofddorp

The Netherlands

Contact/Position

Senior Manager — Product Safety & Reliability

Date/Place

Hoofddorp, Netherlands

Machine Type

Mobile Elevating Work Platform

Model Type

ES1932i, ES1932

**EC-Number** 

2842

Certificate Number

KCEC4618

**Notified Body** 

Kuiper Certificering b.v.

Address

Van Slingelandtstsraat 75, 7331 NM Apeldoorn, The Netherlands

### Reference Standards

- EN 55011:2009/A1:2010
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280:2013+ A1:2015
- FN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2006/42/EC Machinery Directive
- 2014/30/EU EMC Directive
- 2014/53/EU RED Directive (If fitted with optional equipment)

**Note:** This declaration conforms with the requirements of annex II-A of the council directive 2006/42/EC. Any modification of the above described machine violates the validity of this declaration.

### 6.17 UKCA DECLARATION OF CONFORMITY

Manufacturer

JLG Industries, Inc.

Address

1 JLG Drive

McConnellsburg, PA 17233 USA

**Technical File** 

JLG Industries UK Ltd

Braunstone Frith Industrial Estate Unit 3 Sunningdale Road

Leicester, LE3 1UX

United Kingdom

Contact/Position

Director of Engineering — Europe

Date/Place

Leicester, United Kingdom

Machine Type

Mobile Elevating Work Platform

Model Type

ES1932i, ES1932

**AB-Number** 

0463

**Certificate Number** 

AVUK4618

Approved Body

Amtri Veritas

Address

Pierce Street, Macclesfield, SK11 6ER, England

### Reference Standards

- EN 55011:2009/A1:2010
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280:2013+ A1:2015
- EN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2008 No. 1597 Supply of Machinery (Safety) Regulations 2008
- 2016 No. 1091 Electromagnetic Compatibility Regulations 20165
- 2017 No. 1206 Radio Equipment Regulations 2017 (if fitted with optional equipment)

**Note:** This declaration conforms with the requirements of annex II-A of the Regulations 2008 No. 1597. Any modification of the above described machine violates the validity of this declaration.

This Page is intentionally left blank

Serial Number <sub>-</sub>	
----------------------------	--

Any additional required certificates can be attached to the rear cover of this manual or stored in the manual box.

Date	Comments

# Inspection, Maintenance and Repair Log



Corporate Office
JLG Industries, Inc.
1 JLG Drive
McConnellsburg, PA 17233-9533 USA

⟨ (717) 485-5161 (Corporate)
⟨ (877) 554-5438 (Customer Support)

⟨ (717) 485-6417

Visit our website for JLG Worldwide Locations. www.jlg.com

